

User Manual

ADS2000 Series Digital Storage Oscilloscope

Version NO.: V 1.0

Print Date : 2006-4-18

ATTEN Electronics Co., Ltd

Declaration

Copyright © Atten Electronics.,Co.,Ltd. All rights reserved.

Contents in this Manual are not allowed to copy, extract and translate before being allowed by ATTEN company.

ADS Series Digital Storage Oscilloscope Brief Introduction

ADS2000 Series Models:

Real Time Sampling Rate/Band Width	Color(VGA Display)		Monochrome Display	
	1GSa/s	500MSa/s	1GSa/s	500MSa/s
200MHz	ADS2202CA	ADS2202C	ADS2202SA	ADS2202S
150MHz	ADS2152CA	ADS2152C	ADS2152SA	ADS2152S
100MHz	ADS2102CA	ADS2102C	ADS2102SA	ADS2102S
60MHz	ADS2062CA	ADS2062C	ADS2062SA	ADS2062S
40MHz	ADS2042CA	ADS2042C	ADS2042SA	ADS2042S
25MHz	ADS2022CA	ADS2022C	ADS2022SA	ADS2022S

Characteristic:

- Single real-time sampling rate is 1GSa/s (500MSa/s); Equivalent sampling rate is 50GSa/s.
- USB Host/Device, Support EasyScope2.0 software system, USB flash storage.
- Support PictBridge compatible printer.
- Auto measure thirty two parameters support all measurement function.
- Twenty groups capture waveforms and twenty groups setups storage.
- Digital Filter function.
- Support Multilingual online help.
- Pass/Fail function.
- The highest waveform capture rate exceed 1000 times/sec.
- Dual Channels, Each channel bandwidth: 25MHz~200MHz.
- Memory depth: Each channel at least 4K/CH.
- Vertical sensitivity: 2mV~5V/div; Time base scope : 2.5ns~50s/div.
- +, -, *, /, MATH function.
- FFT spectrum analyzer function.

ADS2000 Series Digital Storage Oscilloscope Accessories:

- User Manual
- 1:1/10:1 probe (2 PCS)
- One cable
- USB Host/Device
- EasyScope2.0 computer software system

ADS2000 series Digital Storage Oscilloscope Options:

- GPIB Communication Module
- Serial interface communication Module
- Pass/Fail interface module

General Safety Summary

Review the following safety precautions to avoid injury and prevent damage to this product or any products connected to it. To avoid potential hazards, use this product only as specified.

Only qualified personnel should perform service procedures.

To Avoid Fire or Personal Injury

Use Proper Power Cord. Use only the power cord specified for this product and certified for the country of use.

Connect and Disconnect Properly. Do not connect or disconnect probes or test leads while they are connected to a voltage source.

Ground the Product. This product is grounded through the grounding conductor of the power cord. To avoid electric shock, the grounding conductor must be connected to earth ground. Before making connections to the input or output terminals of the product, ensure that the product is properly grounded.

Connect the Probe Properly. The probe ground lead is at ground potential. Do not connect the ground lead to an elevated voltage.

Observe All Terminal Ratings. To avoid fire or shock hazard, observe all ratings and marking on the product. Consult the product manual for further ratings information before making connections to the product.

Do Not Operate Without Covers. Do not operate this product with covers or panels removed.

Use Proper Fuse. Use only the fuse type and rating specified for this product.

Avoid Exposed Circuitry. Do not touch exposed connections and components when power is present.

Do Not Operate With Suspected Failures. If you suspect there is damage to this product, have it inspected by qualified service personnel.

Do Not Operate in Wet/Damp Conditions.

Do Not Operate in an Explosive Atmosphere.

Keep Product Surfaces Clean and Dry.

Safety Terms and Symbols

Terms on the Product. These terms may appear on the product:

DANGER: Indicates an injury hazard immediately accessible as you read the marking.

WARNING: Indicates an injury hazard not immediately accessible as you read the marking.

CAUTION: indicates a hazard to property including the product.

Symbols on the Product. These symbols may appear on the product:



Warning
high voltage (Earth)



Protective Ground
Terminal



Caution
Refer to Manual



Double
Insulation

Preface

This manual contains operating information for the ADS2000 Series Digital Storage Oscilloscopes. The manual consists of the following chapters:

- ◆ “Accidence” chapter describes the front panel; display area of the oscilloscope; Functional Check and Probe Compensation briefly.
- ◆ “Functions Instruction and Operation” chapter describes function and operation of the Oscilloscope systemically.
- ◆ “Application Examples” chapter includes examples of a wide variety of measurements to give you ideas on how to solve your measure problems.
- ◆ “Prompting messages and Troubleshooting” chapter describes prompting messages and describes some ways of troubleshooting.
- ◆ “Service and Support” chapter introduce warranty and technology of ADS series products.
- ◆ “Appendix A: Specifications” chapter introduce specifications of ADS2000 series oscilloscopes
- ◆ “Appendix B: The table of types of ADS2000 series oscilloscopes chapter introduce types and characteristics of ADS2000 series oscilloscopes detailedly.
- ◆ “Appendix C: ADS2000 Series Oscilloscope Accessories” chapter briefly describes standard and optional accessories.
- ◆ “Appendix D: Default Setup” chapter contains a list of the menus and controls with the default (factory) settings that are recalled when you push the DEFAULT SETUP front-panel button.
- ◆ “Appendix E: General Care and Cleaning” chapter describes how to take care of the oscilloscope.

Catalogue

ADS2000 series Storage Digital Oscilloscope introduction.....	II
General Safety Requirement.....	IV
Preface.....	VI
Chapter 1 Accidence.....	1
1.1 Accidence of the front panel and user interface.....	2
1.2 Function checking.....	5
1.3 Probe.....	7
1.3.1 Probe Safety.....	7
1.3.2 Probe Compensation.....	8
1.3.3 Probe Attenuation Setting.....	9
1.4 Self Calibration.....	10
Chapter 2 Functions Instruction and Operation.....	85
2.1 Menu and control button.....	86
2.2 Connector.....	88
2.3 Auto setup.....	78
2.4 Default setup.....	54
2.5 Universal knob.....	55
2.6 Vertical System.....	56
2.6.1 CH1 & CH2 Channel.....	56
2.6.2 The Using of the Vertical “Position” knob and “Volt/div” knob in the vertical system.....	65
2.6.3 Math Functions.....	65
2.6.4 Using Ref.....	72
2.7 Horizontal System.....	74
2.7.1 Horizontal control knob.....	75

2.7.2 Window Zone.....	76
2.7.3 Trigger Holdoff.....	77
2.8 Trigger System.....	78
2.8.1 Signal Source.....	79
2.8.2 Trigger Type.....	79
2.8.3 Coupling.....	85
2.8.4 Position.....	86
2.8.5 Slope & Level.....	86
2.9 Acquiring Signals system.....	87
2.10 Display System.....	91
2.10.1 X-Y Format.....	94
2.11 Measure System.....	96
2.11.1 Scale Measurement.....	96
2.11.2 Cursor Measurement.....	96
2.11.3 Auto Measurement.....	99
2.12 Storage System.....	106
2.13 Utility System.....	86
2.13.1 System status.....	88
2.13.2 Language.....	89
2.13.3 Print.....	89
2.13.4 Self Calibration.....	92
2.13.5 Self Test.....	93
2.13.6 Pass/Fail.....	95
2.14 Online Help Function.....	100
 Chapter3 Application Examples.....	 101
3.1 Taking Simple Measurements.....	87
3.2 Taking Cursor Measurements.....	89
3.2.1 Measuring Ring Frequency.....	89

3.2.2 Measuring Ring Amplitude	90
3.3 Catch the single signal	91
3.4 Analyze the signal detail	92
3.4.1 Looking at a Noisy Signal	92
3.4.2 Separating the Signal from Noise	92
3.5 Triggering on a Video Signal.....	93
3.5.1 Triggering on Video Field	93
3.5.2 Triggering on Video Lines.....	93
3.6. Application of X-Y function	94
3.7 Analyzing a Differential Communication Signal.....	96
 Chapter 4 prompting messages and troubleshooting	 99
4.1 Prompting messages:	99
4.2 Troubleshooting	101
 Chapter 5 Service and Support	 101
5.1 Maintain summary	101
5.2 Contract us	102
 Appendix A: Specifications	 95
 Appendix B: The table of types of ADS 7000 series oscilloscopes.....	 107
 Appendix C: ADS2000 Series Oscilloscope Accessories	 109
 Appendix D: Default setup	 110
 Appendix E: Daily Maintain and Cleaning.....	 112
 Index	 113

Chapter 1 Accidence

ADS2000 Series Digital Storage Oscilloscope is minitype and portable bench type instruments, which could be used for measuring as the GND voltage.


This Chapter shows you how to operate following tasks:

- ◆ Accidence of the front panel and user interface
- ◆ Simple checking of functions
- ◆ Probe compensation
- ◆ Matching probes attenuation coefficient
- ◆ Auto self calibration program


1.1 Accidence of the front panel and user interface

It is important for you to understand the DSO's front panel before operating it. The following contents are the brief introduction for the front panel function, which is useful to be familiar with the operation of the ADS2000 series Digital Storage Oscilloscope in short time.

ADS2000 series oscilloscopes provides an easy-to-use front panel to convenience users to operate them, the panel contains knobs and buttons. There is a list of five ashen buttons as menu operational buttons on the right of display screen. You can set different options of the current menu in virtue of them. Other buttons are function buttons, you can enter different function menus or obtain given function application in virtue of them.

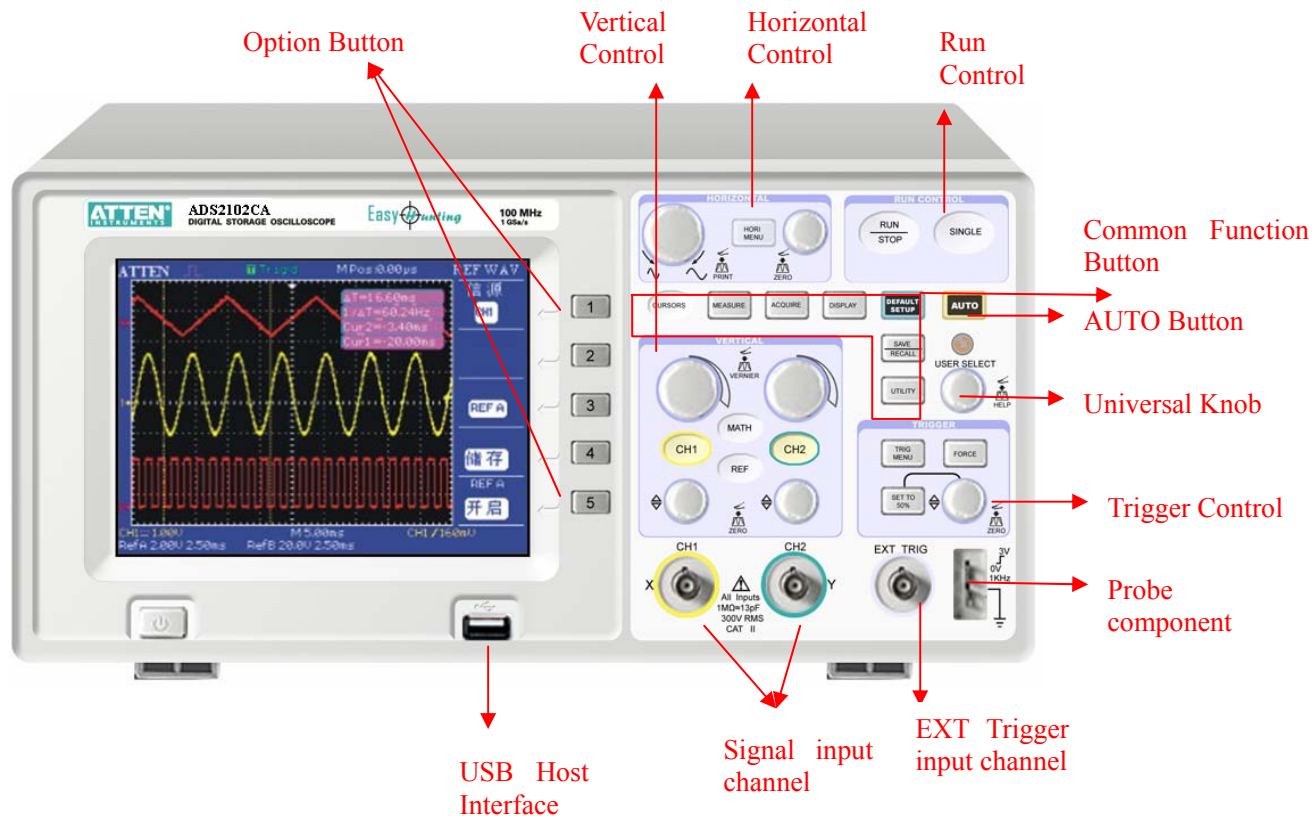

Picture 1- 1 Front Panel Controls

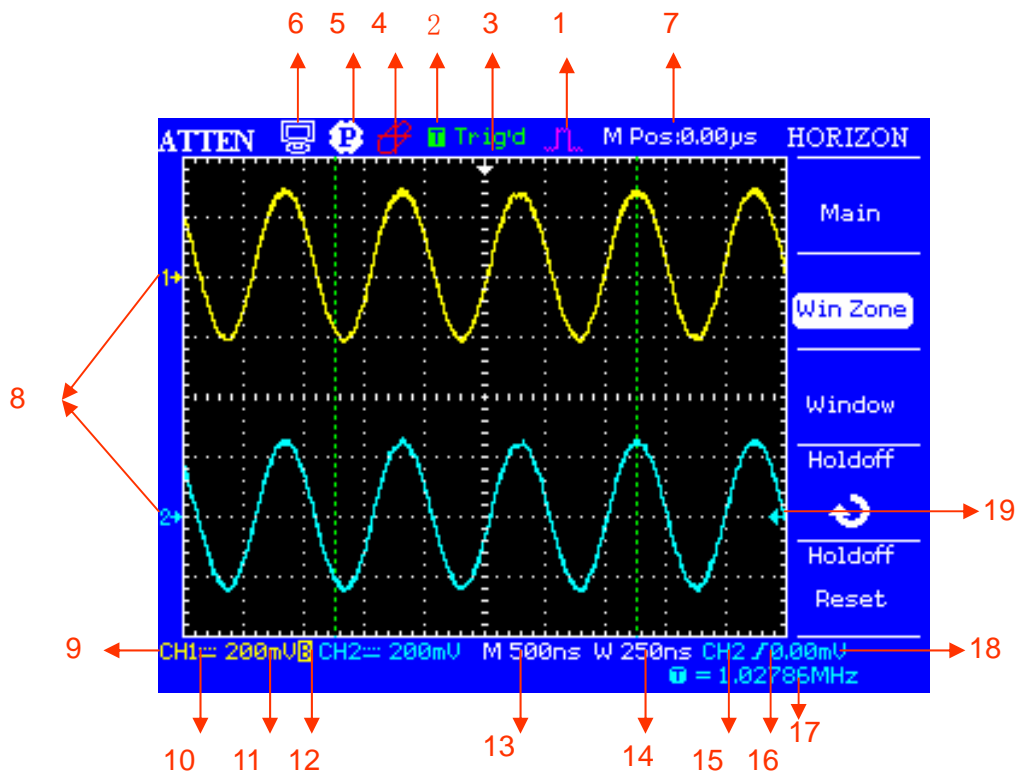

Picture 1-2 Display area

1. Icon display show acquisition mode

Sample mode

Peak detect mode

Average mode

2. Trigger status







Armed. The oscilloscope is acquiring pretrigger data. All triggers are ignored in this state.

Ready. All pretrigger data has been acquired and the oscilloscope is ready to accept a trigger.

Trig'd. The oscilloscope has seen a trigger and is acquiring the posttrigger data.

Stop. The oscilloscope has stopped acquiring waveform data.

Acq. Complete. The oscilloscope has completed a Single Sequence acquisition.


-
- Auto. The oscilloscope is in auto mode and is acquiring waveforms in the absence of triggers.
 - Scan. The oscilloscope is acquiring and displaying waveform data continuously in scan mode.
 - 3. Marker shows horizontal trigger position. Turn the HORIZONTAL POSITION knob to adjust the position of the marker.
 - 4.  USB flash is not inserted to the USB Host interface.
 -  USB flash inserted to the USB Host interface.
 - 5.  “Print Key” option is set to “Print Picture”.
 -  “Print Key” option is set to “Save Picture”.
 - 6.  “Back USB” option is set to “Computer”.
 -  “Back USB” option is set to “Printer”.
 - 7. Readout shows the waveform’s horizontal position.
 - 8. On-screen markers show the ground reference points of the displayed waveforms.
If there is no marker, the channel is not displayed.
 - 9. Display signal source.
 - 10. Signal Coupling symbol.
 - 11. Readout shows the vertical factor of the channels.
 - 12. “B” icon shows that bandwidth function is open.
 - 13. Readout shows the main time base setting.
 - 14. Readout shows window time base setting if it is in use.
 - 15. Readout shows the trigger source for the triggering
 - 16. Icon shows the selected trigger types.
 - 17. Readout shows trigger signal frequency.
 - 18. Readout shows the Edge and pulse width trigger levels
 - 19. Marker shows Edge and pulse width trigger level. And select the video line or field

1.2 Function checking

When you check whether or not the oscilloscope could work smoothly, please operate as following:


1. Power On the oscilloscope.

Press “DEFAULT SETUP” to show the result of the self check. The probe default attenuation is 10X.

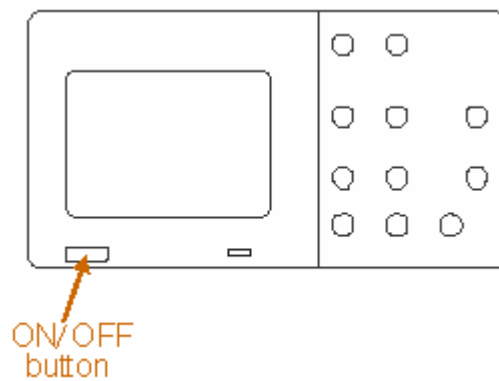


Picture 1-3

2. Set the switch to 10X on the probe and connect the probe to channel 1 on the oscilloscope. To do this, align the slot in the probe connector with the key on the CH1 BNC, push to connect, and twist to the right to lock the probe in place. Connect the probe tip and reference lead to the PROBE COMP connectors

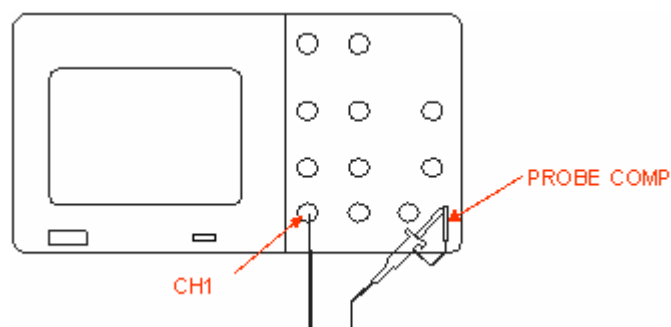

Picture 1-4

3. Press “AUTO” to show the 1KHz frequency and about 3V peak-peak square wave in couple seconds

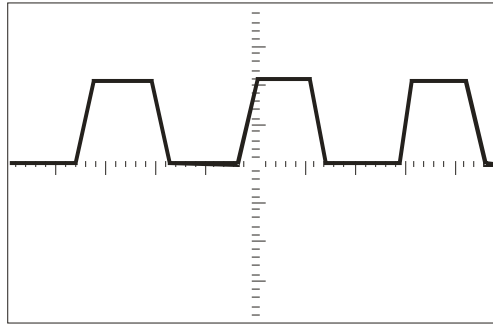


Picture 1-5

Press “CH1” two times to cancel the channel 1, Press“CH2” to change screen into channel 2, reset the channel 2 as step 2 and 3.

1.3 Probe

1.3.1 Probe Safety

A guard around the probe body provides a finger barrier for protection from electric shock.

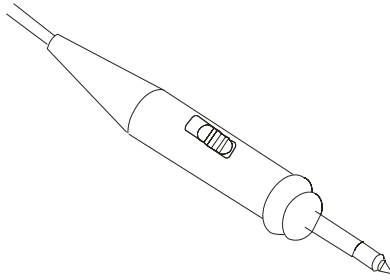


Picture 1-6

Connect the probe to the oscilloscope and connect the ground terminal to ground before you take any measurements.

- Note:**
- To avoid electric shock when using the probe, keep fingers behind the guard on the probe body.
 - To avoid electric shock while using the probe, do not touch metallic portions of the probe head while it is connected to a voltage source.
- Connect the probe to the oscilloscope and connect the ground terminal to ground before you take any measurements.


1.3.2 Probe Compensation

As an alternative method to Probe Check, you can manually perform this adjustment to match your probe to the input channel.

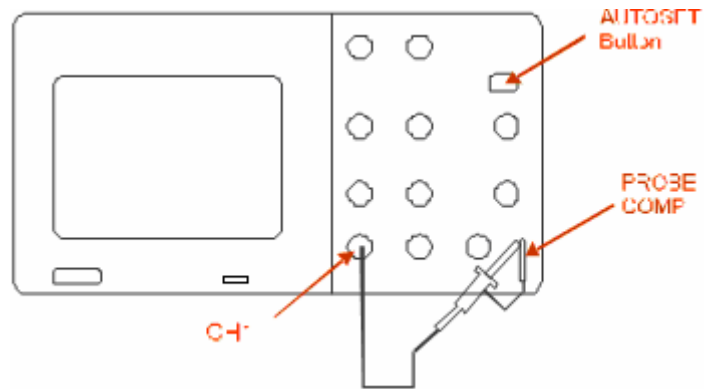

Picture1-7

1. Set the Probe option attenuation in the channel menu to 10X. Set the switch to 10X on the probe and connect the probe to channel 1 on the oscilloscope. If you use the probe hook-tip, ensure a proper connection by firmly inserting the tip onto the probe.
2. Attach the probe tip to the PROBE COMP~3V connector and the reference lead to the PROBE COMP Ground connector. Display the channel and then push the “AUTOSET” button.
3. Check the shape of the displayed waveform.

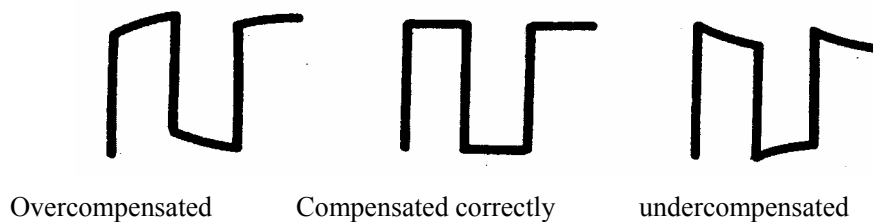

Picture 1-8

4. If necessary, adjust your probe. Repeat as necessary.

1.3.3 Probe Attenuation Setting

Probes are available with various attenuation factors which affect the vertical scale of the signal. The Probe Check function verifies that the Probe attenuation option matches the attenuation of the probe.

You can push a vertical menu button (such as the CH 1 MENU button), and select the Probe option that matches the attenuation factor of your probe.

Note. The default setting for the Probe option is 10X.

Be sure that the Attenuation switch on the probe matches the Probe option in the oscilloscope. Switch settings are 1X and 10X.

Note. When the Attenuation switch is set to 1X, the probe limits the bandwidth of the oscilloscope to 6MHz. To use the full bandwidth of the oscilloscope, be sure to set the switch to 10X

1.4 Self Calibration

The self calibration routine lets you optimize the oscilloscope signal path for maximum measurement accuracy. You can run the routine at any time but should always run the routine if the ambient temperature changes by 5°C or more.

To compensate the signal path, disconnect any probes or cables from the front-panel input connectors. Then, push the UTILITY button, select the “Do Self Cal” option and follow the directions on the screen.


Chapter 2 Functions Instruction and Operation

To use your oscilloscope effectively, you need to learn about the following oscilloscope functions:

- ◆ Menu and control button
- ◆ Connector
- ◆ Auto Setup
- ◆ Default Setup
- ◆ Universal knob
- ◆ Vertical System
- ◆ Horizontal System
- ◆ Trigger System
- ◆ Acquiring signals System
- ◆ Display System
- ◆ Measuring waveforms System
- ◆ Utility System
- ◆ Storage System
- ◆ Online Help function

2.1 Menu and control button

Showing as the following picture:

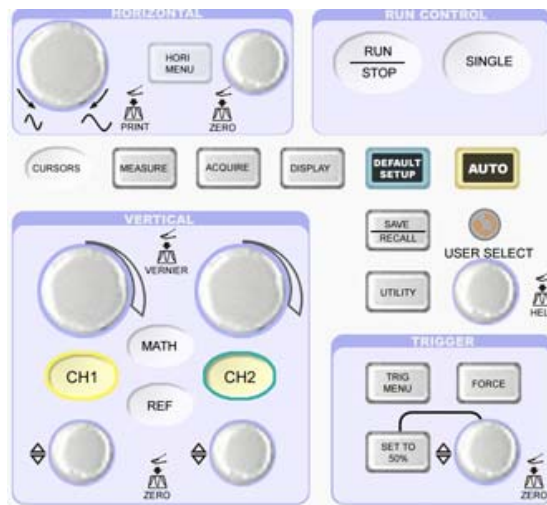


Picture 2-1

All models:

- **CH1、CH2:** Channel 1, channel 2 menu control button.
 - **MATH:** MATH function control button.
 - **REF:** Reference waveforms control button.
 - **HORI MENU:** Horizontal control button.
 - **CURSORS:** Display the Cursor Menu. Vertical Position controls adjust cursor position while displaying the Cursor Menu and the cursors are activated. Cursors remain displayed (unless the “Type” option is set to “Off”) after leaving the Cursor Menu but are not adjustable.
 - **MEASURE:** Display the automated measurements menu.
 - **ACQUIRE:** Display the Acquire Menu.
 - **DISPLAY:** Display the Display Menu.
 - **UTILITY:** Display the Utility Menu.
 - **SAVE/RECALL:** Display the Save/Recall Menu for setups and waveforms.
 - **DEFAULT SETUP:** Recall the factory setup.
 - **AUTO:** Automatically sets the oscilloscope controls to produce a usable display of the input signals.
 - **RUN/STOP:** Continuously acquires waveforms or stops the acquisition.
- Note: If waveform acquisition is stopped (using the RUN/STOP or SINGLE button), the SEC/DIV control expands or compresses the waveform.
- **SINGLE:** Acquire a single waveform and then stops.

-
- **TRIG MENU:** Trigger control button.
 - **SET TO 50%:** Set the trigger level to midpoint of the signal amplitude.
 - **FORCE:** Use the FORCE button to complete the current waveform acquisition whether the oscilloscope detects a trigger or not. This is useful for Single acquisitions and Normal trigger mode.

2.2 Connector

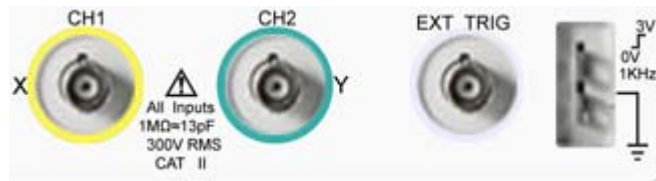

Picture 2-2

- **CH1、CH2:** Input connectors for waveform display.
- **EXT TRIG:** Input connector for an external trigger source. Use the Trigger Menu to select the “Ext”, “Ext/5” or “EXT (50Ω)” trigger source.
- **Probe component:** Voltage probe compensation output and ground. Use to electrically match the probe to the oscilloscope input circuit.






Note: If you connect a voltage source to a ground terminal, you may damage the oscilloscope or the circuit under test. To avoid this, do not connect a voltage source to any ground terminals.

2.3 Auto setup

ADS2000 Series Digital Storage Oscilloscopes have auto setup function, which can identify the type of waveform and adjust controls to produce a usable display of the input signal.

“AUTO” is the auto Set up button.

  
Table 2-1 Auto set function Menu:

Option	Introduction
 (Multi-cycle sine)	Auto set the screen and display several cyc signal.
 (Single-cycle sine)	Set the screen and auto display single cyc signal.
 (Rising edge)	Auto set and show the rising time.
 (Falling edge)	Auto set and show the falling time.
 (Undo Setup)	Causes the oscilloscope to recall the previous setup.

Autoset determines the trigger source based on the following conditions:

- If multiple channels have signals, channel with the lowest frequency signal.
- No signals found, the lowest-numbered channel displayed when Autoset was invoked
- No signals found and no channels displayed, oscilloscope displays and uses channel 1.

Input a signal to Channel 1, press the “Auto” button (See picture 2-3):

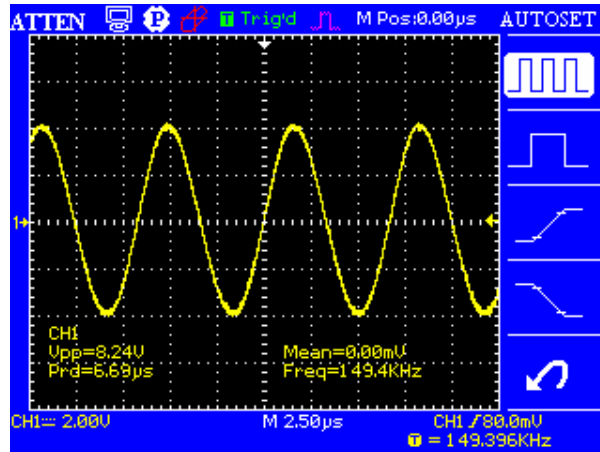

Picture 2-3

Table 2-2 Auto set the function item

Function	Setting
Acquire Mode	Adjusted to Sampling
Display Format	Y-T
Display Type	Set to Dots for a video signal, set to Vectors for an FFT spectrum; otherwise, unchanged
Vertical Coupling	Adjusted to DC or AC according to the input signal
Bandwidth Limit	Off(full)
V/div	Adjusted
VOLTS/DIV adjustability	Coarse
Signal inverted	Off
Horizontal position	Center
S/div	Adjusted
Trigger type	Edge
Trigger source	Auto detect the channel which has the input signal
Trigger slope	Rising
Trigger mode	Auto
Trigger coupling	DC
Trigger holdoff	Minimum
Trigger level	Set to 50%

2.4 Default setup

The oscilloscope is set up for normal operation when it is shipped from the factory.

This is the default setup. To recall this setup, press the DEFAULT SETUP button.

The options, buttons and controls that change settings when you press the DEFAULT SETUP button, refer to appendix D.

The DEFAULT SETUP button does not reset the following settings:

- Language option
- Saved reference waveform files
- Saved setup files
- Display contrast
- Calibration data

2.5 Universal knob




Picture 2-4

ADS2000 Series Digital Storage Oscilloscope has a special knob-the “Universal” knob, Using this knob can adjust the holdoff time, move cursors, set the pulse width, Set the Video Linage, adjust frequency upper limit and frequency lower limit of the digital filter etc. You also can turn the “Universal” knob to adjust the storage position of setups, waveforms, pictures to save or recall them.

When you press the “Universal” knob, you can enter or exit online help status.

2.6 Vertical System

Showing as follow picture, the buttons and knobs are useful in the vertical system

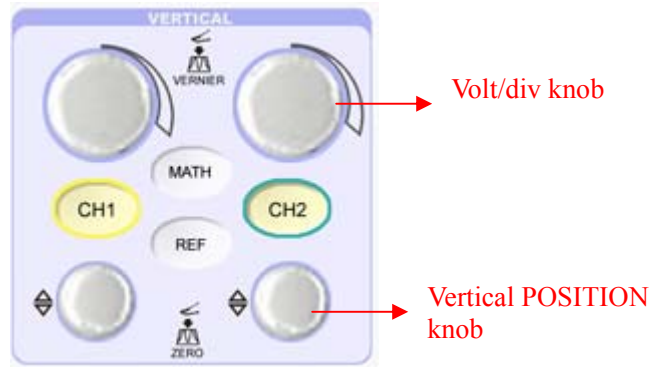

Picture 2-5

The vertical control, which each channel has, could be used for displaying waveform, rectify scale and position.

2.6.1 CH1 & CH2 Channel





Table 2-3 CH1 & CH2 function menu 1:

Option	Setting	Introduction
Coupling	DC	DC passes both AC and DC components of the input signal.
	AC	AC blocks the DC component of the input signal and attenuates signals below 10 Hz.
	GND	GND disconnects the input signal.
Bw limit	On	Limits the bandwidth to reduce display noise; filters the signal to reduce noise and other unwanted high frequency components.
	Off	
Volts/Div	Coarse	Selects the resolution of the Volts/Div knob Coarse defines a 1-2-5 sequence.
	Fine	Fine changes the resolution to small steps between the coarse settings.
Probe	1X	Set to match the type of probe you are using to ensure correct vertical readouts.
	10X	
	100X	
	1000X	
Next Page	Page 1/2	Press this button to enter second page menu.

Table 2-4 CH1 & CH2 function menu 2:

Option	Setting	Instruction
Invert	on	Turn on invert function
	off	Turn off invert function
Input	1M Ω	Set input impedance to 1M Ω
	50 Ω	Set input impedance to 50 Ω
Digital Filter		Press this button to enter the “Digital Filter menu”.(See table 2-5)
Next Page	Page 2/2	Press this button to return the first page menu.

    Table 2-5 Digital Filter function menu:

Option	Setting	Introduction
Digital Filter	On	Turn on the digital filter
	Off	Turn off the digital filter
Type		Setup as LPF(Low Pass Filter)
		Setup as HPF(High Pass Filter)
		Setup as BPF(Band Pass Filter)
		Setup as BRF(Band Reject Filter)
Upper_limit		Turn the “Universal” knob to set upper limit.
Lower_limit		Turn the “Universal” knob to set lower limit.
Return		Return the digital filter main menu.

■ **“GND” Coupling:** Use GND coupling to display a zero-volt waveform. Internally, the channel input is connected to a zero-volt reference level.

■ **Fine Resolution:** The vertical scale readout displays the actual Volts/Div setting while in the fine resolution setting. Changing the setting to coarse does not change the vertical scale until the VOLTS/DIV control is adjusted.

■ **Wave Cancel:** Press the menu button for the channel to display its vertical menu. Push the menu button again to remove the waveform.

- Note:**
- The oscilloscope vertical response rolls off slowly above its bandwidth (60 MHz, 100 MHz, 150 MHz or 200 MHz, depending on the model, or 20 MHz when the Bandwidth Limit option is set to “On”). Therefore, the FFT spectrum can show valid frequency information higher than the oscilloscope bandwidth. However, the magnitude information near or above the bandwidth will not be accurate.
 - If the channel is set to DC coupling, you can quickly measure the DC component of the signal by simply noting its distance from the ground symbol.
 - If the channel is set to AC coupling, the DC component of the signal is blocked allowing you to use greater sensitivity to display the AC component of the signal.


Setting up the CH1、CH2 Channels

Each channel has its own separate Menu. The items are set up separately according to each channel.

1. Set up the channel couple


Take the CH1 for example, the tested signal is a sine wave signal with DC deflection:

- Press “CH1” → “Coupling” → “AC”, Set to AC couple mode. It blocks the DC component of the input signal.

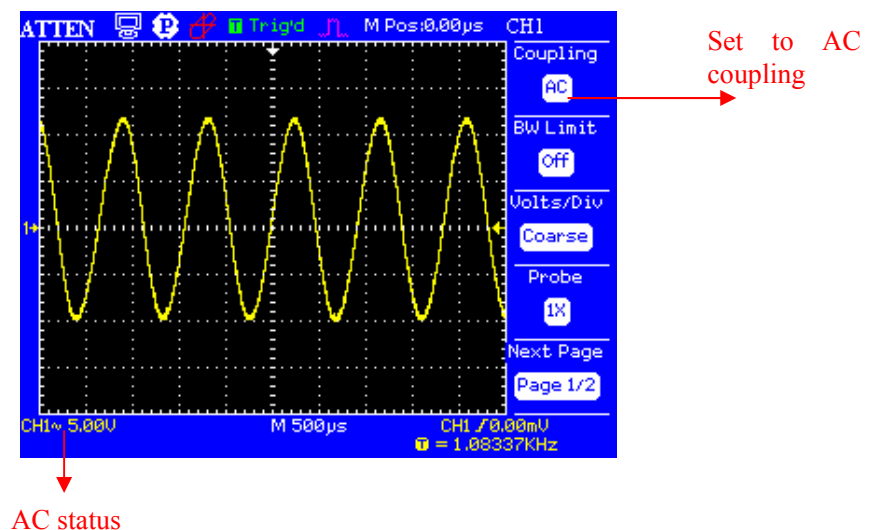


Picture 2-6

- Press“CH1”→“Coupling”→“DC”, Set to DC couple mode. Both DC and AC component could be obstructed.

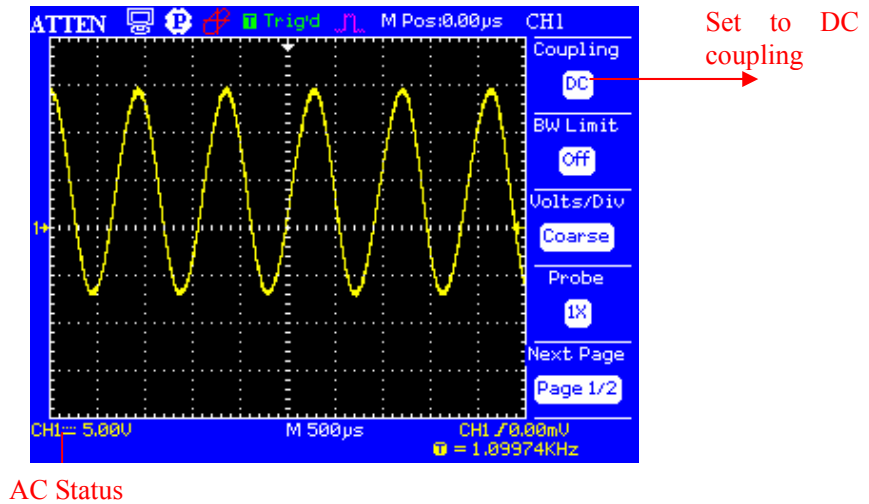

Picture 2-7

- Press“CH1”→“Coupling”→“GND”, Set to GOUND mode. It disconnects the input signal.

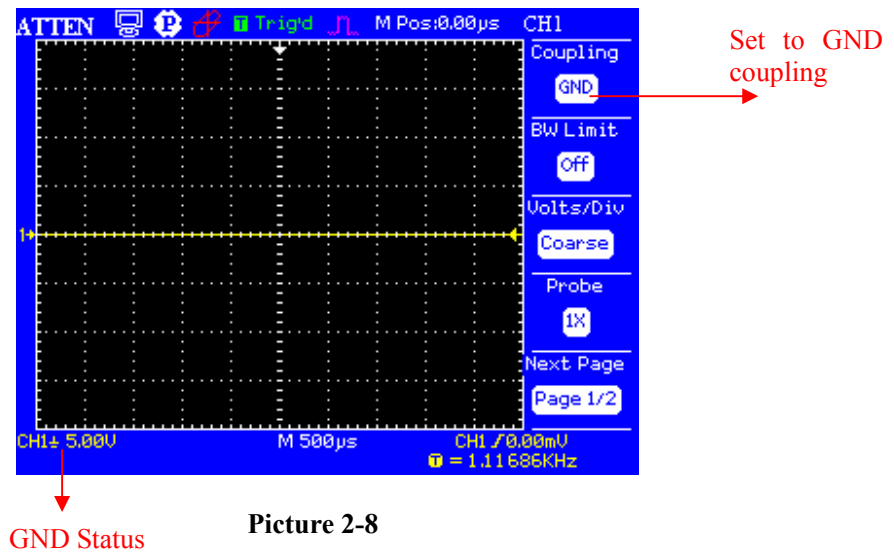


Picture 2-8

2. Set up the channel bandwidth limit

Take the CH1 for example, the tested signal is a pulse signal with the high frequency surge:

- Press “CH1”→“BW Limit”→“On”, Set the band width Limited to open state. The high frequency component which is higher than 20MHz obstructed.

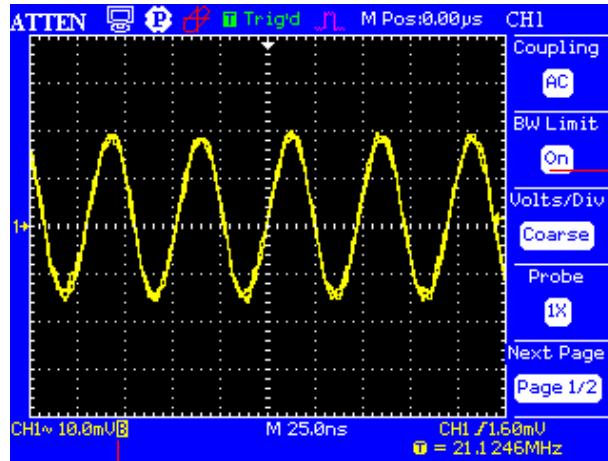


Picture 2-9

Bandwidth Limit Symbol

Set bandwidth to 20MHZ

- Press “CH1” → “BW Limit” → “Off”, Set bandwidth Limited to close state, the High Frequency component in the tested signal could pass.

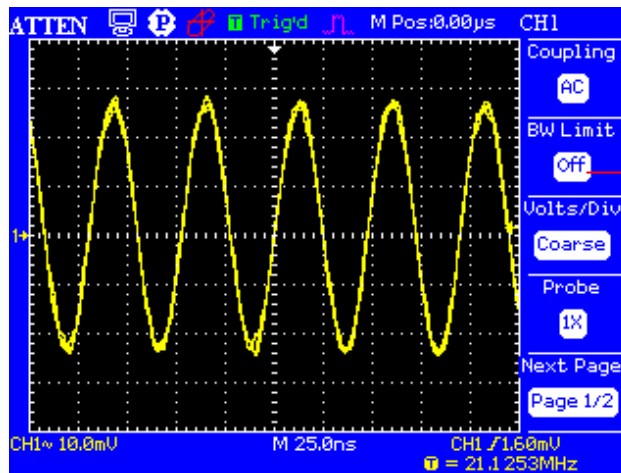

Picture 2-10


Set off bandwidth

3. Volts/Div settings

Vertical scale adjust have Coarse and fine two modes, Vertical sensitivity range is 2mV/div ~ 5V/div scale.


Take the CH1 for example:

- Press “CH1” → “Volts/Div” → “Coarse”. It is the default setting of Volts/Div, and it makes the vertical scaling in a 1-2-5-step sequence from 2mv/div, 5mv/div, 10mv/div to 5v/div.

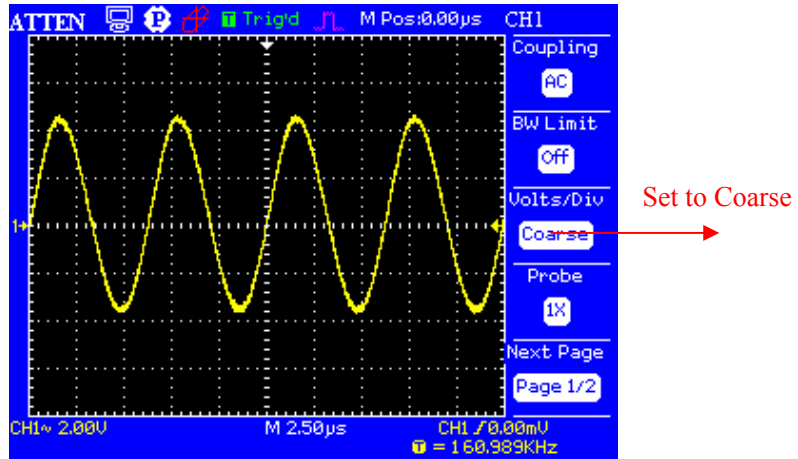

Picture 2-11

- Press "CH1" → "Volts/Div" → "Fine". This setting changes the vertical to small steps between the coarse settings. It will be helpful when you need to adjust the waveform vertical size in smooth steps.

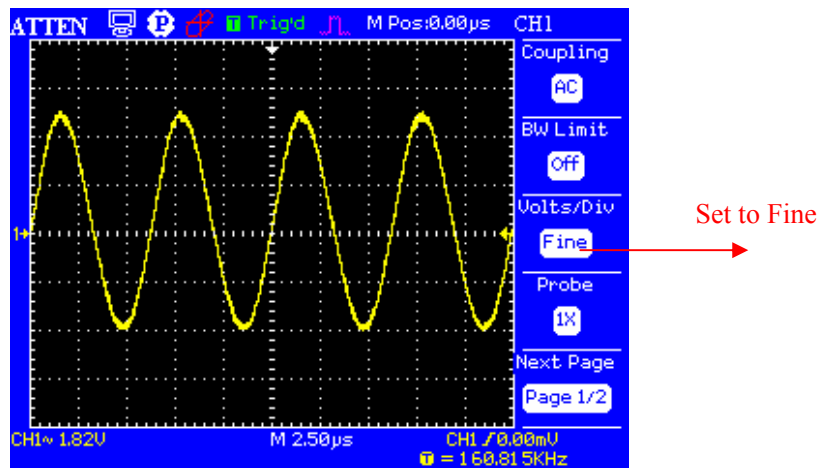


Picture 2-12

4. Probe Attenuation set

In order to assort the attenuation coefficient, you need to response in the channel operation Menu. If the attenuation coefficient is 10:1, the input coefficient should be set to 10X, so that the mistake of the Volts/div information and measure testing should be forbidden.

Take the CH1 for example, when you use the 100:1 probe:

- Press "CH1" → "Probe" → "100X"

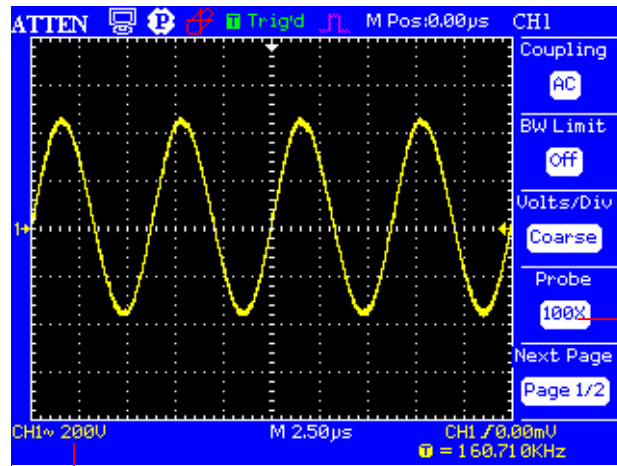


Status changes with the probe attenuation

Picture 2-13

5. To invert a waveform


Take the CH1 for example:

- Press “CH1” → “Invert” → “On”:

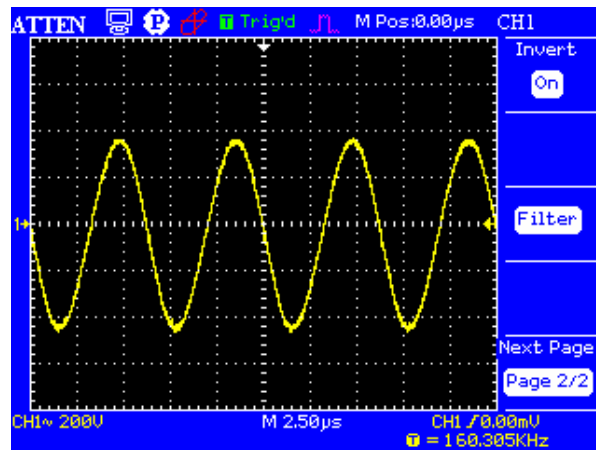

Picture 2-14

- Press “CH1” → “Invert” → “Off”:

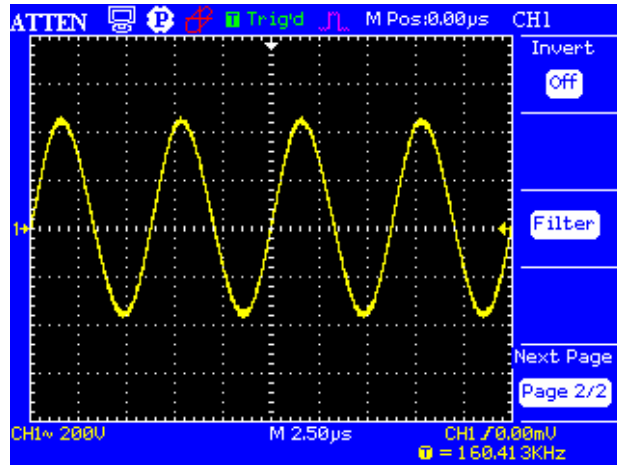

Picture 2-15

6. Select input impedance


Select channel input impedance as $1M\Omega$ or 50Ω . If 50Ω is selected, the input coupling is automatically set to DC.

- Note:**
- when 50Ω is selected, always ensure the input voltage at BNC does not exceed the maximum voltage ($5V_{rms}$) to avoid damaging channel input components.
 - Do not use 50 with the standard probe.
 - Only the frequency of the oscilloscope is 200MHZ or 150MHZ having this setup.

7. Digital Filter


Press “CH1”→“Next Page”→ “Filter”, display the digital filter menu. Select “Filter Type”, then select “Upper Limit” or “Lower Limit” and turn the “Universal” knob to adjust them.

- Press “CH1”→“Next Page”→ “Filter” →“Off”. Turn off the Digital Filter function.

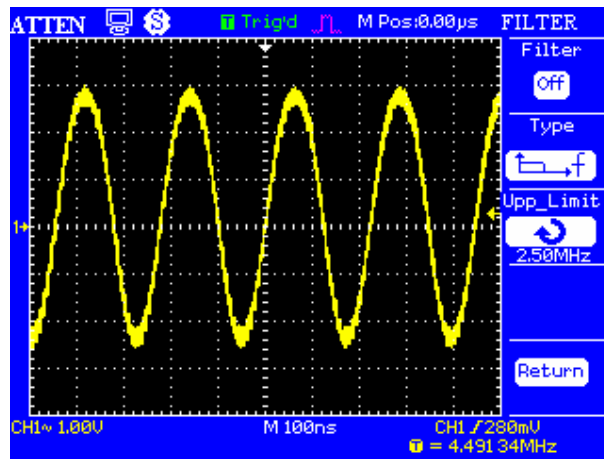

Picture 2-16

- Press “CH1”→ “Next Page”→ “Filter” → “On”. Turn on the Digital Filter function.

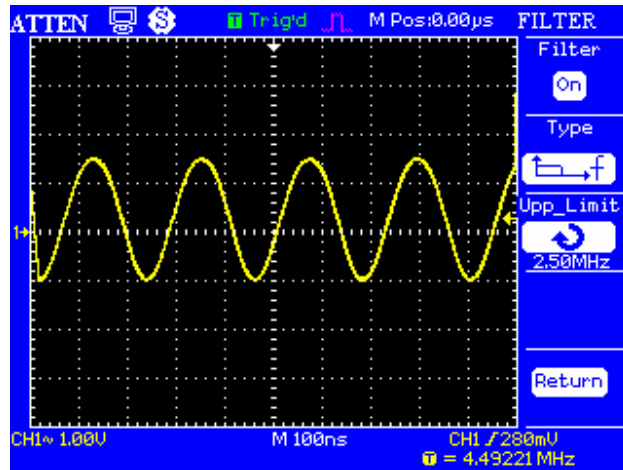

Picture 2-17

2.6.2 The Using of the Vertical “Position” knob and “Volt/div” knob in the vertical system

■ Vertical “POSITION” knob

1. Use the Vertical “POSITION” knobs to move the channel waveforms up or down on the screen. This button’s resolution is variety as per the vertical scale.
2. When you adjust the vertical position of channels waveforms, the vertical position information will display on the left bottom of screen. For example “Volts Pos=24.6mV”.
3. Press the vertical “POSITION” knob to set the vertical position to zero.

■ “Volts/div” knob

1. Use the “Volts/div” knobs to control how the oscilloscope amplifies or attenuates the source signal of channel waveforms. When you turn the “volts/div” knob, the oscilloscope increases or decreases the vertical size of the waveform on the screen with respect to the ground level;
2. When you press the “Volt/div” Knob, you can switch “Volt/div” option between “Coarse” and “Fine”. The vertical scale is made sure by the 1-2-5 step in the Coarse. Increase in the clockwise, reduce in the anticlockwise. In the fine mode, the knob changes the Volts/Div scale in small steps between the coarse settings. Increase in the clockwise, reduce in the anticlockwise.

2.6.3 Math Functions

Math shows the results after +,-,*, / and FFT operation of the CH1 and CH2.

Press the MATH button to display the waveform math operations. Press the MATH button again to remove the math waveform display.


Table 2-6 MATH function menu:

Function	Setting	Introduction
Operation	+、-、*、 /、FFT	Source 1 plus Source 2
CH1 Invert	on off	Invert the CH1 waveform Turn off CH1 Invert function
CH2 Invert	on off	Invert the CH2 waveform Turn off CH2 Invert function

Table 2-7 MATH function instruction

Operation	Setting	Introduction
+	CH1+CH2	CH1 waveform add CH2 waveform
-	CH1-CH2 CH2-CH1	The channel 2 waveform is subtracted from the channel 1 waveform The channel 1 waveform is subtracted from the channel 2 waveform
*	CH1*CH2	Source 1 multiply source 2
/	CH1/CH2 CH2/CH1	Source 1 divide Source 2 Source 2 divide Source 1
FFT	Fast Fourier Transform	

CH1 waveform add CH2 waveform, see picture 2-18:

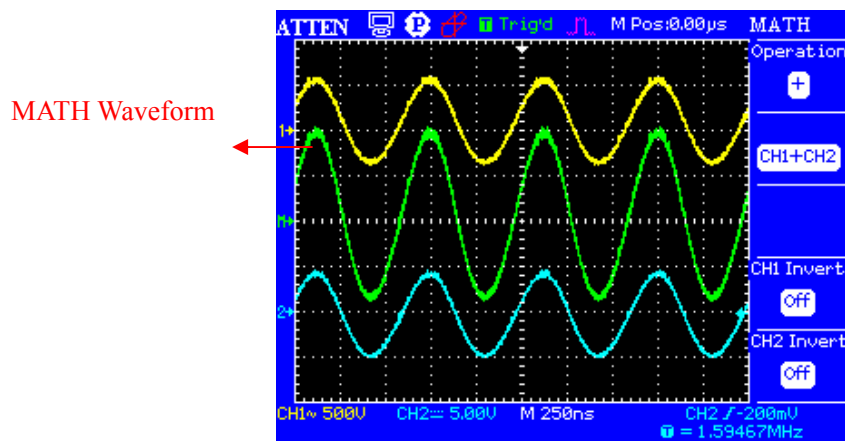

Picture 2-18

1. FFT Spectrum Analyzer

The FFT process mathematically converts a time-domain signal into its frequency components. You can use the Math FFT mode to view the following types of signals:

- Analyze the Humorous wave in the Power cable.
- Test the Humorous content and distortion in the system
- Show the Noise in the DC Power supply
- Test the filter and pulse response in the system
- Analyze vibration

Table 2-8 FFT function menu:

FFT Option	Setting	Introduction
Source	CH1 CH2	Select this channel as the FFT source
Window	Hanning Hamming Rectangular Blackman	Select FFT window types
FFT ZOOM	1X 2X 5X 10X	Changes the horizontal magnification of the FFT display;
Scale	Vrms dBVrms	Set Vrms to be the Vertical Scale unit Set dBVrms to be the vertical Scale unit

To use the Math FFT mode, you need to perform the following tasks:

1. Set up the source (time-domain) waveform.

- Press the AUTO button to display a YT waveform.
- Turn the vertical “POSITION” knob to move the YT waveform to the center vertically (zero divisions).
- Turn the horizontal “POSITION” knob to position the part of the YT waveform that you want to analyze in the center eight divisions of the screen.

The oscilloscope calculates the FFT spectrum using the center 1024 points of the time-domain waveform.


- Turn the “Volts/div” knob to ensure that the entire waveform remains on the screen.
- Turn the “S/div” knob to provide the resolution you want in the FFT spectrum.
- If possible, set the oscilloscope to display many signal cycles.

To display FFT correctly, follow these steps:

1. Push the “MATH” button.
2. Set the “Operation” option to FFT.
3. Press the “Source” button to select “CH1” or “CH2” according to input signal channel.
4. According to Nyquist law, turn the “S/div” knob to adjust the sampling rate is at least double than input signal frequency.

2. Displaying the FFT Spectrum

Press the MATH button to display the Math Menu. Use the options to select the Source channel, Window algorithm, and FFT Zoom factor. You can display only one FFT spectrum at a time.

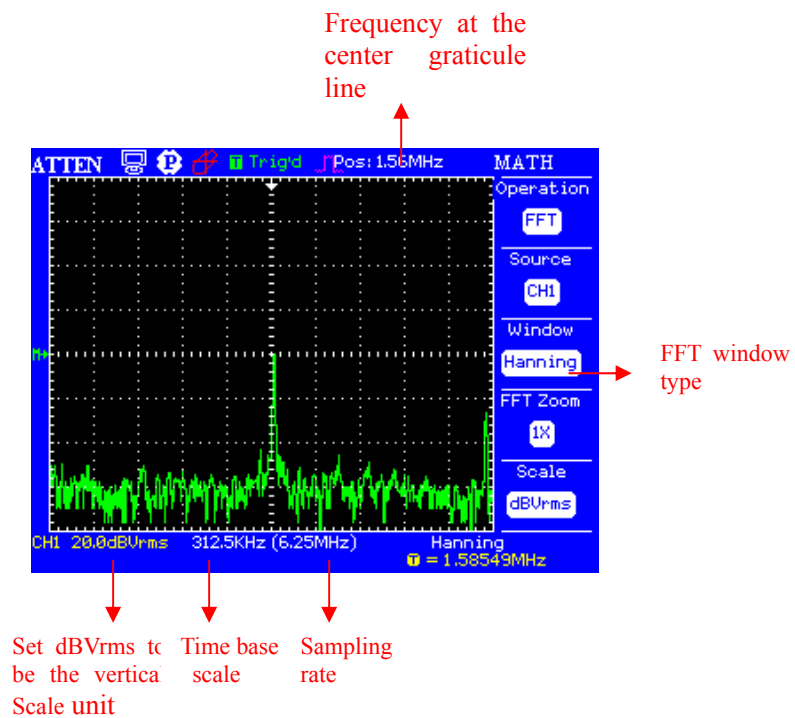

Picture 2-19

3. Select FFT window

Windows reduce spectral leakage in the FFT spectrum. The FFT assumes that the YT waveform repeats forever. With an integral number of cycles, the YT waveform starts and ends at the same amplitude and there are no discontinuities in the signal shape. A non-integral number of cycles in the YT waveform causes the signal start and end points to be at different amplitudes. The transitions between the start and end points cause discontinuities in the signal that introduce high-frequency transients.

According to the tested options and source speciality, make sure the window you need to use.

Table 2-9 FFT window instruction

Window	Speciality	Satisfied Test content
Rectangular	Best frequency resolution, worst magnitude resolution. This is essentially the same as no window.	Symmetric transients or bursts. Equal-amplitude sine waves with fixed frequencies. Broadband random noise with a relatively slowly varying spectrum.
Hanning Hamming	Better frequency, poorer magnitude accuracy than Rectangular. Hamming has slightly better frequency resolution than Hanning.	Sine, periodic, and narrow-band random noise. Asymmetric transients or bursts.
Blackman	Best magnitude, worst frequency resolution.	Single frequency waveforms, to find higher order harmonics.

4. Magnifying and Positioning an FFT Spectrum

You can magnify and use cursors to take measurements on the FFT spectrum. The oscilloscope includes an “FFT Zoom” option to magnify horizontally, press this option button to select “1X”, “2X”, “5X” or “10X”. To magnify vertically, you can turn the “Volts/div” knob.


5. Measuring an FFT Spectrum Using Cursors

You can take two measurements on FFT spectrums: magnitude (in dB) and frequency (in Hz). Magnitude is referenced to 0 dB, where 0 dB equals 1 VRMS. You can use the cursors to take measurements at any zoom factor. (Refer to cursor measure2.11.2) Use horizontal cursors to measure amplitude and vertical cursors to measure frequency.

If you input a sine signal to channel 1, follow these steps:

1. Measure FFT Amplitude


- 1) Input a 1.58MHz sine signal to channel 1, and press the “AUTO” button.
- 2) Press the “MATH” button to enter the “MATH” menu.
- 3) Press the “Operation” option button to select “FFT”.
- 4) Press the “Source” option button to select “CH1”.
- 5) Turn the “S/div” knob to adjust sampling rate to “6.25MSa/s”.
- 6) Press the “CURSOR” button to enter “Cursor” menu.
- 7) Press the “Type” option button to select “Voltage”.
- 8) Press the “Source” option button to select “MATH”.
- 9) Press the “Cur1” option button, turn the “Universal” knob to move Cursor 1 to the highest point of the FFT waveform.
- 10) Press the “Cur2” option button, turn the “Universal” knob to move Cursor 2 to the lowest point of the FFT waveform.
- 11) The amplitude (ΔT) displays on the top right of the screen.

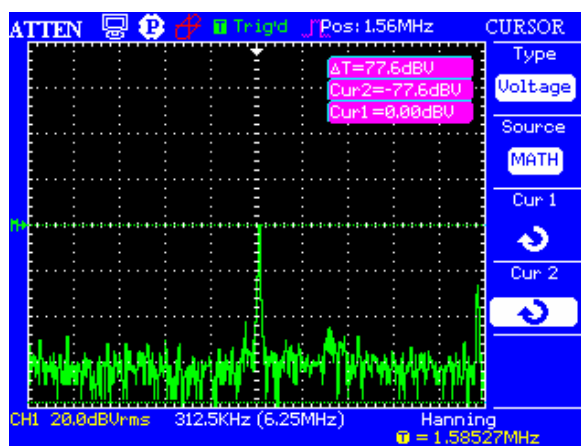

Picture 2-20

2. Measure FFT Frequency

- 1) Press the “Type” option button to select “Time” in the “Cursor” menu.
- 2) Press the “Source” option button to select “MATH”.
- 3) Press the “Cur1” option button, turn the “Universal” button to move Cursor 1 to the highest position of the FFT waveform.
- 4) The value of Cur1 displaying on the top right of the screen is FFT highest Frequency. This frequency should be the same as input signal frequency.

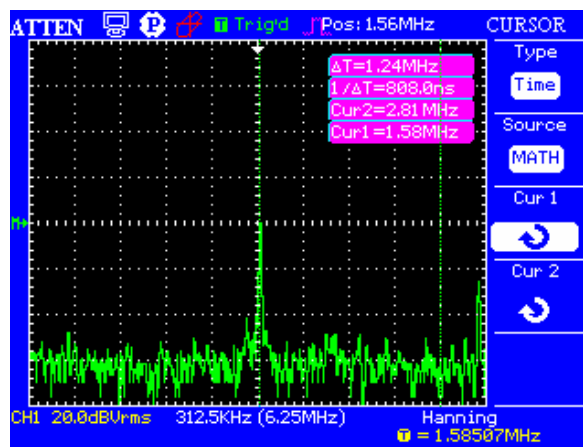

Picture 2-21

- NOTE:**
- The FFT of a waveform that has a DC component or offset can cause incorrect FFT waveform magnitude values. To minimize the DC component, choose AC Coupling on the source waveform.
 - To display FFT waveforms with a large dynamic range, use the dBVrms scale. The dBVrms scale displays component magnitudes using a log scale.
 - The Nyquist frequency is the highest frequency that any real-time digitizing oscilloscope can acquire without aliasing. This frequency is half that of the sample rate, provided it is within the analog bandwidth of the oscilloscope. Frequencies above the Nyquist frequency will be under sampled, which causes aliasing.


2.6.4 Using Ref

The reference control saves waveforms to a nonvolatile waveform memory. The reference function becomes available after a waveform has been saved.

Table 2-10 REF function menu:

Option	Setting	Introduction
Source	CH1 CH2 CH1 off CH2 off	Choose the waveform display to store.
REFA REFB		Choose the reference location to store or recall a waveform.
Save		Stores source waveform to the chosen reference location.
REFA/REFB	on off	Recall the reference waveform on the screen. Turn off the reference waveform.

Press the Ref button to display the “Reference waveform menu”.

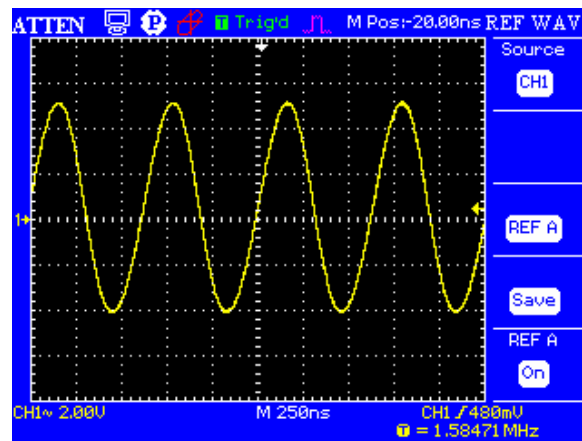

Picture 2-22

Operation step:


1. Press the “REF” menu button to display the “Reference waveform menu”.
2. Press the “Source” option button to select input signal channel.
3. Turn the vertical “POSITION” knob and “Volt/div” knob to adjust the vertical

position and scale to conformable positions.

4. Press the top third option button to select “REFA” or “REFB” as storage position.

5. Press the “Save” option button.

6. Press the bottom option button to select “REFA On” or “REFB On” to recall the reference waveform.

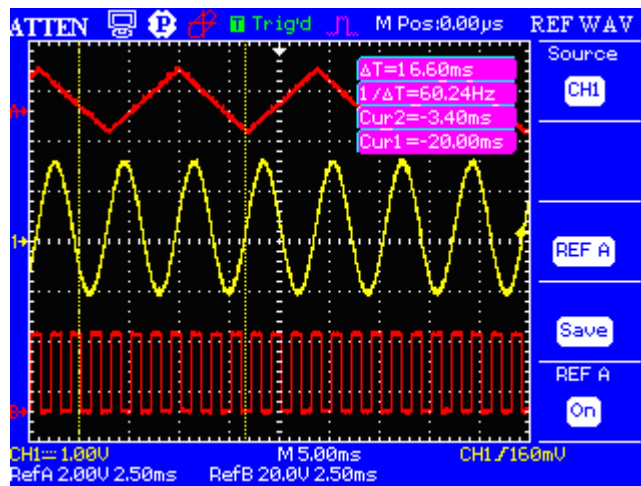

Picture 2-23

- Note:**
- X-Y mode waveforms are not stored as reference waveforms.
 - You cannot adjust the horizontal position and scale of the reference waveform.

2.7 Horizontal System

As follow Picture, there are one button and two knobs in the HORIZONTAL area.




Picture 2- 24

Table 2- 11 Horizontal system function menu:

Option	Introduction
Main	Display the waveform
Win Zone	Two Cursors define one window, use horizontal “ POSITION” and “S/div” to adjust the window
Window	Change the display so that the waveform could be displayed in the window (expanded to screen width)
Holdoff	Using the “universal” knob to adjust holdoff time(sec), the holdoff value is displayed
Holdoff Reset	Reset holdoff time to 100ns

- **“HORI MENU” button:** Press the “HORI MENU” button to display the horizontal Menu. In this menu, you can turn window mode on or off. Otherwise, you could set the horizontal position knob to Trig-offset.

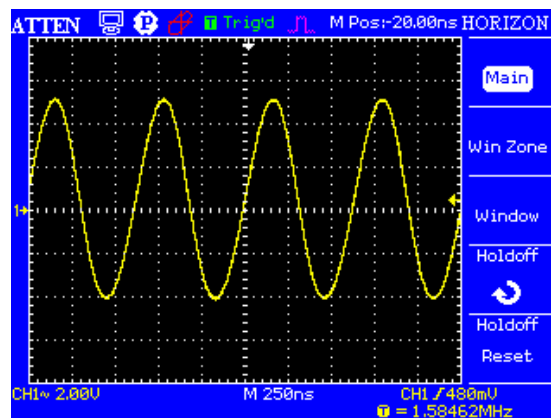

Picture 2-25

The axis of the vertical scale is GND level. The readout on the top right corner, which unit is sec, show us the horizontal position. “M” Mean main time base, “W” mean window time base.. It is also a arrow on the scale top to show the vertical position.

■ **Window Zone:** Using “Window Zone” to define one wave sect, it is useful to reap the details. The Window time base setting cannot be set slower than the Main time base setting.

■ **Window:** Expand the window to cover the whole screen.

2.7.1 Horizontal control knob

You can use the horizontal controls to change the horizontal scale and position of waveforms. The horizontal position readout shows the time represented by the center of the screen, using the time of the trigger as zero. Changing the horizontal scale causes the waveform to expand or contract around the screen center.

■ Horizontal “POSITION” knob

1. Adjust the horizontal position of all channels and math waveforms (the position of the trigger relative to the center of the screen). The resolution of this control varies with the time base setting.
2. When you press the horizontal “POSITION” Knob, you can set the horizontal position to zero.

■ “S/div” knob

1. Using to change the horizontal time scale to magnify or compress the waveform. If waveform acquisition is stopped (using the RUN/STOP or SINGLE button), turn the S/div knob to expand or compress the waveform.
2. Select the horizontal time/div (scale factor) for the main or the window time base. When Window Zone is enabled, it changes the width of the window zone by changing the window time base.
3. You can print the picture or store the picture to USB flash when you press the “S/div” knob.

■ Display scan mode:

When the SEC/DIV control is set to 100 ms/div or slower and the trigger mode is set to Auto, the oscilloscope enters the scan acquisition mode. In this mode, the waveform display updates from left to right. There is no trigger or horizontal position control of waveforms during scan mode.


2.7.2 Window Zone

Use the Window Zone option to define a segment of a waveform to see more detail. The Window time base setting cannot be set slower than the Main time base setting.

You can turn the Horizontal Position and SEC/DIV controls to enlarge or minish waveforms in the Window Zone.

If you want to see a section of the waveform in detail, follow these steps:


1. Press the “HORI MENU” button to enter the “Horizontal menu”.
2. Press the “Win Zone” option button.
3. Turn the “S/div” knob (adjust window’s size) and turn the “Horizontal Position” knob (adjust window’s position) to select the window that your need (see picture 2-26). The Window time base setting cannot be set slower than the Main time base setting.

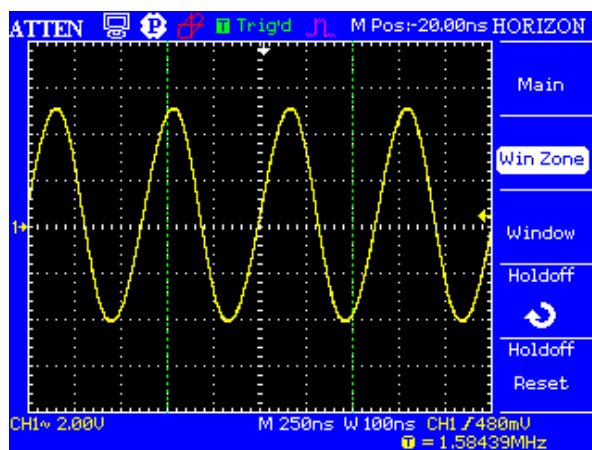

Picture 2-26

4. Press the “Window” button. Now the window waveform has been expanded


to cover the whole screen.(See picture 2-27)

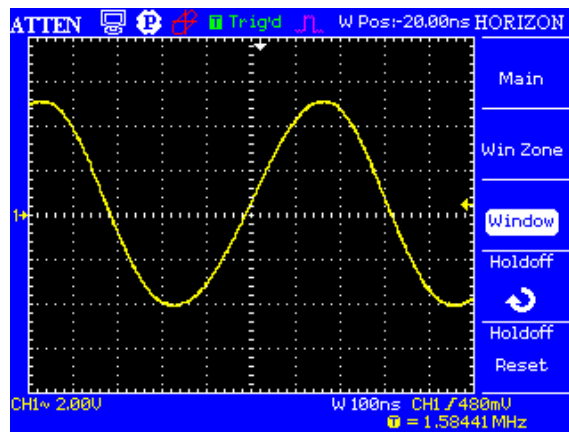

Picture 2-27

2.7.3 Trigger Holdoff

You can use the Trigger Holdoff function to produce a stable display of complex waveforms. Holdoff is time between when the oscilloscope detects one trigger and when it is ready to detect another. The oscilloscope will not trigger during the holdoff time. For a pulse train, you can adjust the holdoff time so the oscilloscope triggers only on the first pulse in the train.

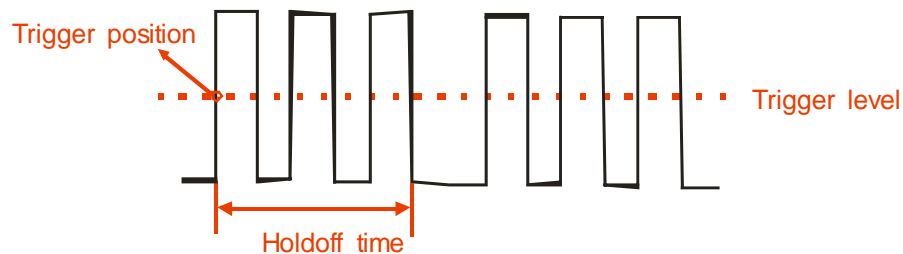

Picture 2-28

If you want to change holdoff time, please follow next operations:

1. Press the “HORI MENU” button to show the “Hori Menu”.
2. Press the “Holdoff” option button.
3. Adjust the universal knob to change the holdoff time up to waveforms trigger steadily.


Note:

- When you change between the Main, Window Zone, and Window views, the oscilloscope erases any waveform saved on the screen through persistence.
- Use trigger holdoff to help stabilize the display of aperiodic waveforms.

2.8 Trigger System

The trigger determines when the oscilloscope starts to acquire data and display a waveform. When a trigger is set up properly, the oscilloscope converts unstable displays or blank screens into meaningful waveforms.

Here are three buttons and one Knob in the Trigger area. Showing as Picture.2-29:

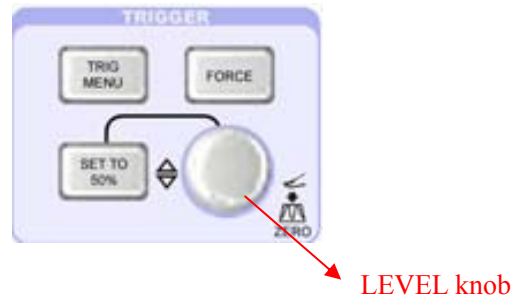

Picture 2-29

- **“TRIG MENU” Button:** Press the “TRIG MENU” Button to display the “Trigger Menu”.
- **“LEVEL” Knob:** The LEVEL knob is to set the corresponding signal voltage of trigger point in order to sample. Press the “LEVEL” knob can set trigger level to zero.
- **“SET TO 50%” Button:** Use the “SET TO 50%” button to stabilize a waveform quickly. The oscilloscope can set the Trigger Level to be about halfway between the minimum and maximum voltage levels automatically. This is useful when you connect a signal to the EXT TRIG BNC and set the trigger source to Ext or Ext/5.
- **“FORCE” Button:** Use the FORCE button to complete the current waveform acquisition whether the oscilloscope detects a trigger or not. This is useful for SINGLE acquisitions and Normal trigger mode.
- **Pretrigger/Delayed trigger:** The data before and after trigger the trigger position is typically set at the horizontal center of the screen, in the full-screen display the 6div data of pretrigger and delayed trigger can be surveyed. More data of pretrigger and 1s delayed trigger can be surveyed by adjusting the horizontal position.

The feature is very useful because you can see the events that led up the trigger point

everything to the right of the trigger point is called posttrigger information the amount of delay range (pretrigger and posttrigger information) available is dependent on the sweep speed selected.

2.8.1 Signal Source

You can use the Trigger Source options to select the signal that the oscilloscope uses as a trigger. The source can be any signal connected to a channel BNC, to the EXT TRIG BNC or the AC power line (available only with Edge triggers).

2.8.2 Trigger Type


ADS2000 Series have three types Trigger: Edge, Video, Pulse.

Edge Trigger: Use Edge triggering to trigger on the edge of the oscilloscope input signal at the trigger threshold.

Table 2-12 Edge Trigger function Menu:

Option	Setting	Explain
Type	Edge	With Edge highlighted, the rising or falling edge of the input signal is used for the trigger
Source	CH1 CH2	Triggers on a channel whether or not the waveform is displayed.
	EXT	Does not display the trigger signal; the Ext option uses the signal connected to the EXT TRIG front-panel BNC and allows a trigger level range of -2.4V to +2.4V
	EXT/5	Same as Ext option, but attenuates the signal by a factor of five, and allows a trigger level range of +12V to -12V. This

		extends the trigger level range.
	AC Line	This selection uses a signal derived from the power line as the trigger source; trigger coupling is set to DC and the trigger level to 0 volts
	EXT (50Ω)	Select EXT TRIG (50Ω) as the trigger signal
Slope	Raising Falling	Select the Raise and Fall edges of the trigger signals
Mode	Auto	Use this mode to let the acquisition free-run in the absence of a valid trigger; This mode allows an untriggered, scanning waveform at 100 ms/div or slower time base settings
	Normal	Use this mode when you want to see only valid triggered waveforms; when you use this mode, the oscilloscope does not display a waveform until after the first trigger
	Single	when you want the oscilloscope to acquire a single waveform, press the “SINGLE” button
Coupling	DC	Passes all components of the signal
	AC	Blocks DC components and attenuates signals below 10 Hz
	HF Reject	Attenuates the high-frequency components above 80 kHz
	LF Reject	Blocks the DC component and attenuates the low-frequency components below 300 kHz

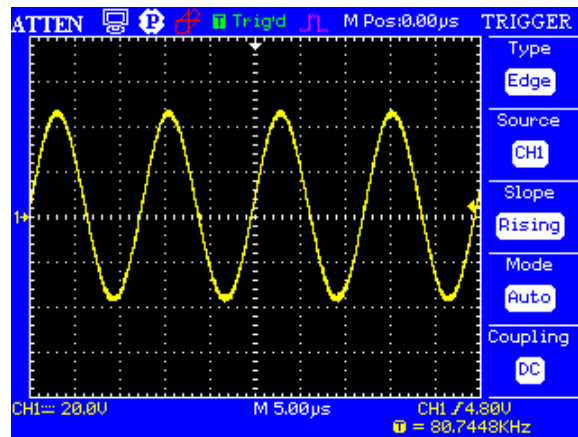

Picture 2-30

Operate Instruction:

1. Set up Type

- 1) Press the “TRIG MENU” button to display “Trigger” menu.
- 2) Press the “Type” option button to select “Edge”.

2. Set up Source

According to input signal, press the “Source” option button to select “CH1”, “CH2”, “EXT”, “EXT/5” or “AC Line”.

3. Set up Slope

Press the “Slope” option button to select “Rising” or “Falling”.

4. Set up Trigger mode

Press the “Trigger mode” option button to select “Auto”, “Normal”, “Single”.

Auto: The waveform refresh at a high speed whether the trigger condition is satisfied or not.

Normal: The waveform refresh when the trigger condition is satisfied and waits for next trigger event occurring when the trigger condition is not satisfied.

 

 
 


Single: The oscilloscope acquire a waveform when the trigger condition is satisfied and then stops.


5. Set up Trigger coupling

Press the “Coupling” option button to select “DC”, “AC”, “HF Reject” or “LF Reject”.

Pulse Trigger: Use Pulse Width triggering to trigger on aberrant pulses.

Table 2-13 Pulse Trigger function Menu 1:


Option	Setting	Explain
Type	Pulse	Select the pulse to trigger the pulse match the trigger condition
Source	CH1 CH2 EXT EXT/5 EXT (50Ω)	
When	 (Positive pulse width less than pulse width setting)  (Positive pulse width larger than pulse width setting)  (Positive pulse width equal to pulse width setting)  (Negative pulse width less than pulse width setting)  (Negative pulse width larger than pulse width setting)  (Negative pulse width equal to pulse width setting)	Select how to compare the trigger pulse relative to the value selected in the Set Pulse Width option
Set Width	20.0ns~10.0s	Selecting this option can turn the universal to set up the pulse width.
Next Page	Page 1/2	Press this button to enter the second page.

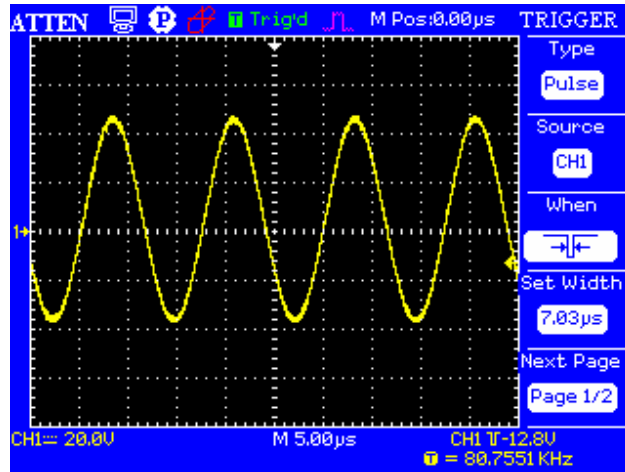

Picture 2-31

Table 2-14 Pulse Trigger function Menu 2:

Option	Setting	Explain
Type	Pulse	Select the pulse to trigger the pulse match the trigger condition
Mode	Auto Normal single	Select the type of triggering; Normal mode is best for most Pulse Width trigger applications
Coupling	DC AC HF Reject LF Reject	
Next Page	Page 2/2	Press this button to return the first page.

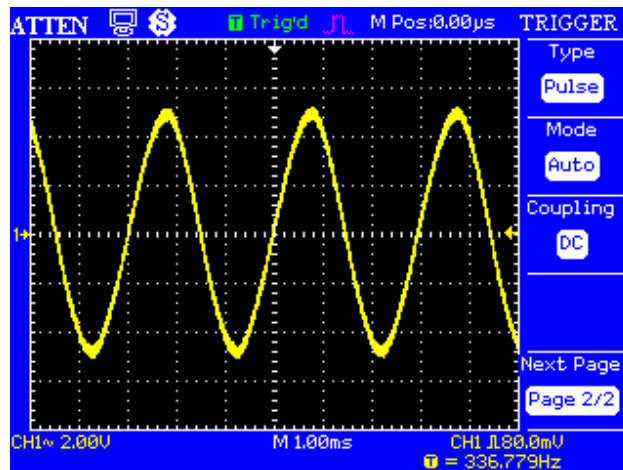


Picture 2-32

Operate Instruction:

1. Set up Type

- 1) Press the “TRIG MENU” button to display “Trigger menu”.
- 2) Press the “Type” option button to select “Pulse”.

2. Set up condition


 
Press the “When” option button to select “


3. Set up pulse width

Turn the “Universal” knob to set up width.

Video Trigger: Trigger on fields or lines of standard video signals.

Table 2-15 Functional Menu of Video Trigger:

Option	Setting	Instruction
Type	Video	When you select the video type, put the couple set to the AC, then you could trigger the NTSC, PAL and SECAM video signal
Source	CH1 CH2	Select the input source to be the trigger signal
	EXT EXT/5	Ext and Ext/5 use the signal applied to the EXT TRIG connector as the source
	EXT (50Ω)	Select EXT TRIG (50Ω) as the trigger signal
Polarity	 (Normal)	Normal triggers on the negative edge of the sync pulse
	 (Inverted)	Inverted triggers on the positive edge of the sync pulse
Sync	Line Num All lines Odd field Even Field	Select appropriate video sync
Standard	NTSC Pal/Secam	Select the video standard for sync and line number count

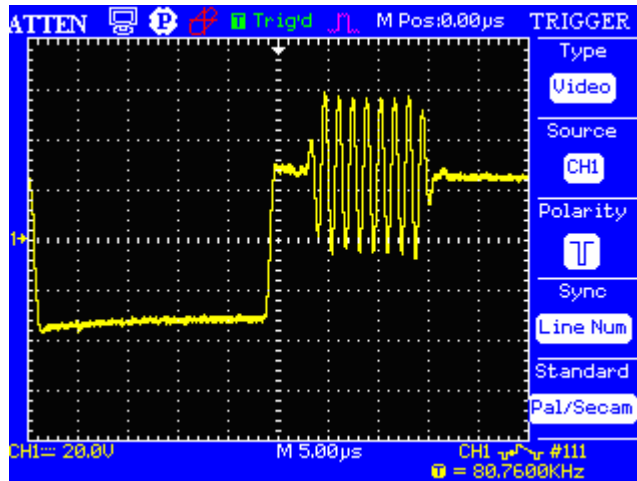

Operate Instruction:

1. Set up Type

- 1) Press the “TRIG MENU” button to display “Trigger” menu.
- 2) Press the “Type” option button to select “Video”.

2. Set up Polarity

Press the “Polarity” option button to select “” or “.

3. Set up synchronization

- 1) Press the “Sync” option button to select “All Lines”、“Line Num”、“Odd Field”、“Even Field”.
- 2) If you select “Line Num”, you can turn the “Universal” knob to set the appointed line number.

4. Set up Standard

Press the “Standard” option button to select “PAL/SECAM” or “NTSC”.

2.8.3 Coupling

Use the “Coupling” to make sure the signal that passes the trigger circuit. It is useful for us to gather a steady wave form.

If you use the trigger coupling, you should press the “TRIGGE” button and then select “edge” or “Pulse” trigger. Then select the “coupling” option.


2.8.4 Position

The horizontal position control establishes the time between the trigger position and the screen center. You can adjust the horizontal “POSITION” knob control to view waveform data before the trigger, after the trigger, or some of each. When you change the horizontal position of a waveform, you are changing the time between the trigger and the center of the display actually. (This appears to move the waveform to the right or left on the display.)

2.8.5 Slope & Level

The Slope and Level controls help to define the trigger. The Slope option (Edge trigger type only) determines whether the oscilloscope finds the trigger point on the rising or the falling edge of a signal.

The TRIGGER LEVEL knob controls where on the edge the trigger point occurs.

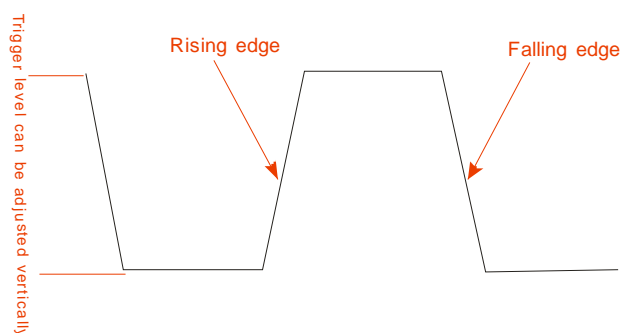


Picture 2-34

- Note:**
- Press the SINGLE button when you want the oscilloscope to acquire a single waveform
 - Trigger coupling affects only the signal passed to the trigger system. It does not affect the bandwidth or coupling of the signal displayed on the screen.
 - Normal Polarity Sync triggers always occur on negative-going horizontal sync pulses. If the video waveform has positive-going horizontal sync pulses, use the Inverted Polarity selection.
 - Source-EXT (50Ω): This function is only in models that the bandwidth is 250MHZ or 100MHZ. And normally used only for a signal source that requires 50Ω termination.

2.9 Acquiring Signals system

Showing as the follow picture, the “ACQUIRE” button for Acquiring Signals system is at the menu.

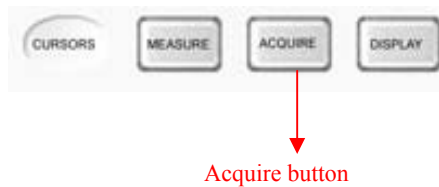

Picture 2-35

Table 2- 16 The Function manual of Acquiring Signals:


Option	Setting	Introduction
Sampling		Use for sampling and accurately display most of the waveform
Peak Check		Detect the noise and decrease the possibility of aliasing.
Average		Use to reduce random or uncorrelated noise in the signal display.
Averages	4 16 32 64 128 256	Select number of averages
Mode	Equ time Real time	Set up the Sampling form

When you acquire a signal, the oscilloscope converts it into a digital form and displays a waveform. The acquisition mode defines how the signal is digitized and the time base setting affects the time span and level of detail in the acquisition.

■ **Sampling:** In this acquisition mode, the oscilloscope samples the signal in evenly spaced intervals to construct the waveform. This mode accurately represents signals most of the time.

Advantage: You can use this mode to reduce random noise.

Disadvantage: This mode does not acquire rapid variations in the signal that may occur between samples. This can result in aliasing may cause narrow pulses to be missed. In these cases, you should use the Peak Detect mode to acquire data.

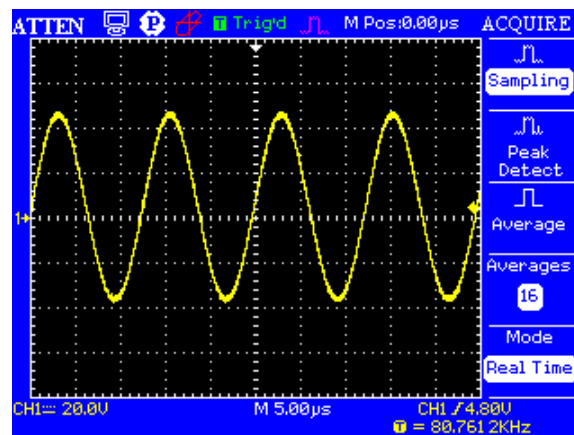


Picture 2-36 Sampling modes

■ **Peak Detect:** Peak Detect mode capture the maximum and minimum values of a signal Finds highest and lowest record points over many acquisitions.

Advantage: In this way, the oscilloscope can acquire and display narrow pulses, which may have otherwise been missed in Sample mode.

Disadvantage: Noise will appear to be higher in this mode.

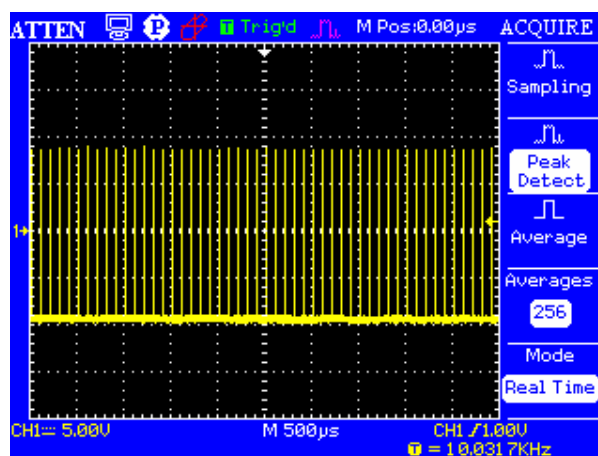


Picture 2-37 Peak Detect mode

■ **Average:** The oscilloscope acquires several waveforms, averages them, and

displays the resulting waveform.

Advantage: You can use this mode to reduce random noise.

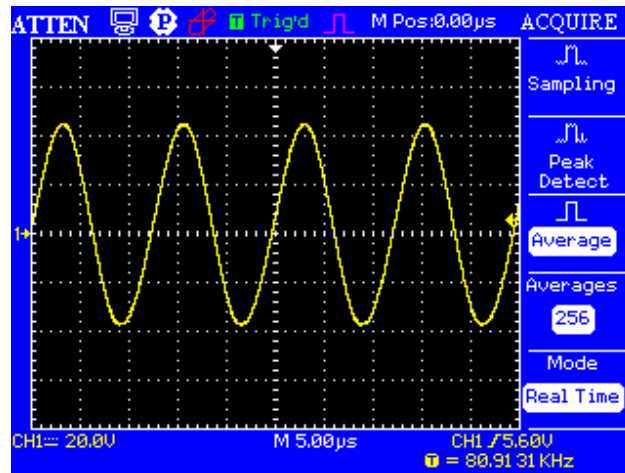

Picture 2-38 Average mode

■ **Equivalent Time Sampling:**

The equivalent time sampling mode can achieve up to 20 ps of horizontal resolution (equivalent to 50GSa/s). This mode is good for observing repetitive waveforms.

■ **Real Time Sampling:** ADS2000 has the highest Real-time sampling rate up to 1GSa/s.

■ **“RUN/STOP” Button:** Press the RUN/STOP button when you want the oscilloscope to acquire waveforms continuously. Press the button again to stop the acquisition.

■ **“SINGLE” Button:** Press the SINGLE button to acquire a single waveform. Each time you push the SINGLE button, the oscilloscope begins to acquire another waveform. After the oscilloscope detects a trigger it completes the acquisition and stops.

When you push the RUN/STOP or SINGLE buttons to start an acquisition, the oscilloscope goes through the following steps:

- 1) . Acquire enough data to fill the portion of the waveform record to the left of the trigger point. This is also called the pretrigger.
- 2) . Continue to acquire data while waiting for the trigger condition to occur.
- 3) . Detect the trigger condition.

4) . Continue to acquire data until the waveform record is full.


5) . Display the newly-acquired waveform.

■ **Base time:** The oscilloscope digitizes waveforms by acquiring the value of an input signal at discrete points. The time base allows you to control how often the values are digitized.

To adjust the time base to a horizontal scale that suits your purpose, use the S/div knob.

■ **Time Domain Aliasing:**

Aliasing occurs when the oscilloscope does not sample the signal fast enough to construct an accurate waveform record. When this happens, the oscilloscope displays a waveform with a frequency lower than the actual input waveform, or triggers and displays an unstable waveform.

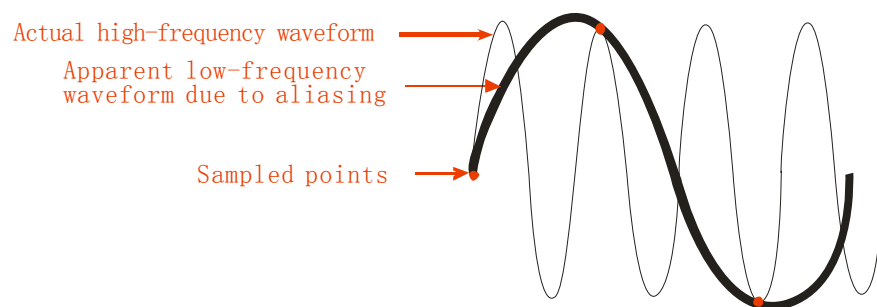

Picture 2-39

Operate Introduction:

1. Set up Sampling Format

You can press the “Sampling”, “Peak Detect” or “Average” option button to select a sampling format according to your need.

2. Set up Averages

When you select “Average” format, you can press the “Averages” option button to select “4”, “16”, “32”, “64”, “128” or “256”.

3. Set up Sampling mode

Press the “Mode” option button to select “Real Time” or “Equ Time”.

2.10 Display System


The display function could be expressed by the “DISPLAY” Button.



Picture 2-40




Table 2-17 Display system function menu 1:


Option	Setting	Introduction
Type	Vectors Dots	Vectors fills the space between adjacent sample points in the display Dots: display sample points directly
Persist	Off 1 sec 2 sec 5 sec Infinite	Sets the length of time each displayed sample point remains displayed
Contrast	+	Increase the display contrast
Contrast	-	Decrease the display contrast
Next Page	Page 1/2	Press this button to enter second page.

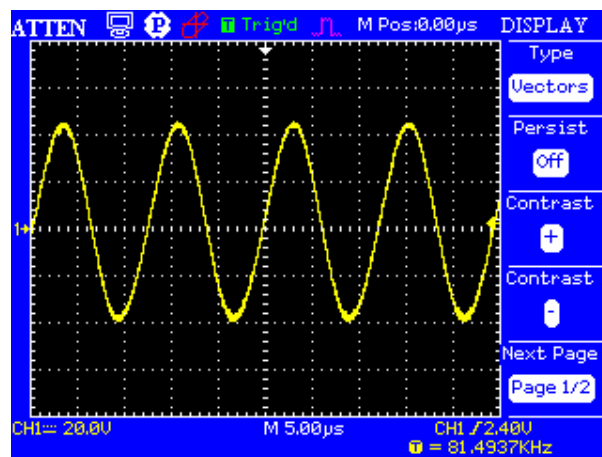

Picture 2-41

   Table 2-18 Display system function menu 2:

Option	Setting	Introduction
Format	YT XY	YT format displays the vertical voltage in relation to time (horizontal scale) XY format displays a dot each time a sample is acquired on channel 1 and channel 2
Screen	Normal Inverted	set to normal mode set to invert color display mode
Grid	  	Display grids and axes on the screen Turn off the grids Turn off the grids and axes
Next Page	Page 2/2	Press this button to return the first page.

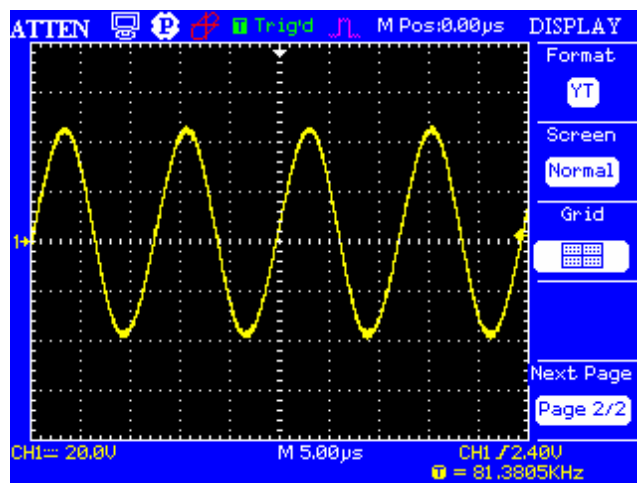

Picture 2-42

Operate Introduction:


1. Set up waveform display type

- 1) Press the “DISPLAY” button to enter the “Display” menu.
- 2) Press the “Type” option button to select “Vectors” or “Dots”.

2. Set up Persist

Press the “Persist” option button to select “Off”, “1 Sec”, “2 Sec”, “5Sec”

or “Infinite”. You can use this option to observe some especial waveforms.

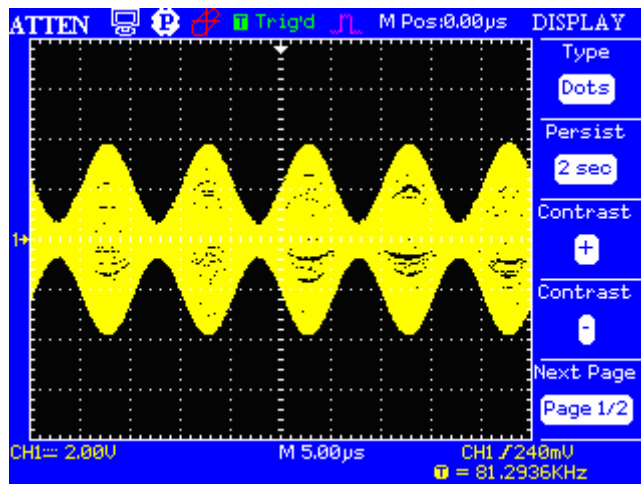

Picture 2-43

3. Set up Contrast

- 1) Press the “Contrast +” option button continuously to increase the screen lightness.
- 2) Press the “Contrast -” option button continuously to decrease the screen lightness.


 

4. Set up display format

- 1) Press the “Next Page” option button to enter second display menu.
- 2) Press the “Format” option button to select “YT” or “XY”.

5. Set up Screen

Press the “Screen” option button to select “Normal” or “Inverted” to set the screen display color.

6. Set up Grid

Press the “Grid” option button to select “”, “” or “” to set the screen whether display grid or not.

2.10.1 X-Y Format

Use the XY format to analyze phase differences, such as those represented by Lissajous patterns. The format plots the voltage on channel 1 against the voltage on channel 2, where channel 1 is the horizontal axis and channel 2 is the vertical axis. The oscilloscope uses the untriggered Sample acquisition mode and displays data as dots. The sampling rate is fixed at 1 MSA/s.

XY mode has a breakthrough that trad oscilloscopes restrict sampling rate at 1MSa/s, support 5KSA/s~200MSa/s (1-2-5 sequence).

Note: The oscilloscope can capture a waveform in normal YT mode at any sampling rate. You can view the same waveform in XY mode. To do so, stop the acquisition and change the display format to XY.

Operation steps :

- Channel 1“Volt/div”and vertical “POSITION” set up the horizontal scale and position.
- Channel 2“Volt/div”and vertical “POSITION” set up the horizontal scale and position.
- Turn the “S/div” knob to adjust the sampling rate (Range: 5KSA/s~200MSa/s) .

The following functions are forbidden at XY display form:

- Benchmark wave form and wave mathematic
- Cursor
- Auto (resets display format to YT)
- Trigger Control
- Horizontal Position Knob
- Vector Display Type

-
- Scan Display

Note: When the display Type is set to Vectors, the oscilloscope connects the sample points by using digital interpolation. Interpolation mode contain linearity interpolation and $\sin(x)/x$ interpolation. $\sin(x)/x$ interpolation is suitable for real time mode. When the real time rating is 500MSa/s, it is effective at 250ns/div or at faster time base. When the real time rating is 1GSa/s, it is effective at 25ns/div or at faster time base.

2.11 Measure System

The Oscilloscope displays the voltage in relation to time and test the wave form displayed. There are scale, Cursor and auto measure modes.

2.11.1 Scale Measurement

This method allows you to make a quick, visual estimate. For example, you might look at a waveform amplitude and determine that it is a little more than 100 mV. You can take simple measurements by counting the major and minor graticule divisions involved and multiplying by the scale factor. For example, if you counted five major vertical graticule divisions between the minimum and maximum values of a waveform and knew you had a scale factor of 100mV/div, then you could easily calculate your peak-to-peak voltage as follows:

$$5 \text{ divisions} \times 100 \text{ mV/division} = 500 \text{ mV.}$$

2.11.2 Cursor Measurement

Picture 2-16 displays the cursor button on the front-panel for this menu.




Picture 2-44

Press the “CURORS” button to display the “Cursor” Menu.

Table 2-19 Cursor function menu:

Option	Setting	Introduction
Type	Voltage Time off	Select and display the measure cursor; Voltage measures amplitude and Time measures time and frequency.
Source	CH1 CH2 MATH	Select the wave form which is measured by the cursor measure.

	REFA REFB	
Cur1 ↻		Select Cur1 and turn the universal knob to adjust Cur1.
Cur2 ↻		Select Cur2 and turn the universal knob to adjust Cur2.

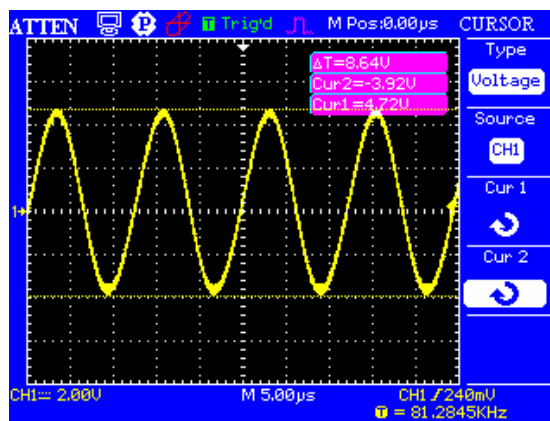

Picture 2-45

This method allows you to take measurements by moving the cursors, which always appear in pairs, and reading their numeric values from the display readouts.

- **Voltage Cursor:** Voltage cursors appear as horizontal lines on the display and measure the vertical parameters.
- **Time Cursor:** Time cursors appear as vertical lines on the display and measure the horizontal parameters.
- **Cursor Moving:** Use the “universal” knob to move cursor1 and cursor2 .They could be moved when the corresponding cursor option are selected, and cursor value will display on the bottom left and top right of the screen when you move the cursor.

Operate Introduction

1. Set up Type

- 1) Press the “CURSOR” button to enter the “Cursor” menu.

2) Press the “Type” option button to select “Voltage”, “Time” or “Off”.

2. Set up Source

Press the “Source” option button to select “CH1”, “CH2”, “MATH”, “REFA” or “REFB”.

3. Move Cursors

1) Move cursor1

If the “Type” is selected “Voltage”, Press the “Cur1” option button and turn the “Universal” knob to move Cursor 1 up or down..

If the “Type” is selected “Time”, press the “Cur1” option button and turn the “Universal” knob to move Cursor 1 horizontally.

2) Move cursor2

If the “Type” is selected “Voltage”, Press the “Cur2” option button and turn the “Universal” knob to move Cursor 2 up or down.

If the “Type” is selected “Time”, press the “Cur2” option button and turn the “Universal” knob to move Cursor 2 horizontally.


4. Display parameters

If the “Type” is selected “Voltage”, the value of Cur1, the value of Cur2, and the vertical space between Cursor1 and Cursor 2: ΔT (the voltage value between two cursors)

If the “Type” is selected “Time”, the value of Cur1, the value of Cur2, the horizontal space between Cursor1 and Cursor 2: ΔT (the time value between two cursors) and the value of $1/\Delta T$.

2.11.3 Auto Measurement

“MEASURE” is Automatic measure function button.

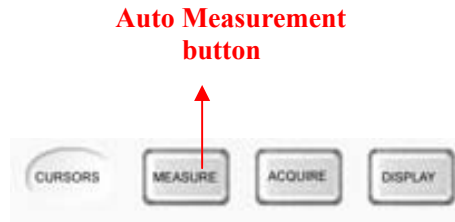

Picture 2-46


When you take automatic measurements, the oscilloscope does all the calculating for you. Because the measurements use the waveform record points, they are more accurate than the graticule or cursor measurements.

Press the ‘MEASURE’ for the Automatic Test.

There are three auto measurement types: Voltage Measure, Time Measure and Delay Measure. There are thirty two measure parameters in all.

Table 2-20 Auto measure function menu 1:

Option	Instruction
Voltage	Press this button to enter the Voltage measure menu.
Time	Press this button to enter the Time measure menu.
Delay	Press this button to enter the Delay measure menu.
All Mea	Press this button to enter the All Measurement menu.
Return	Press this option button to return the home page of the auto measure menu.

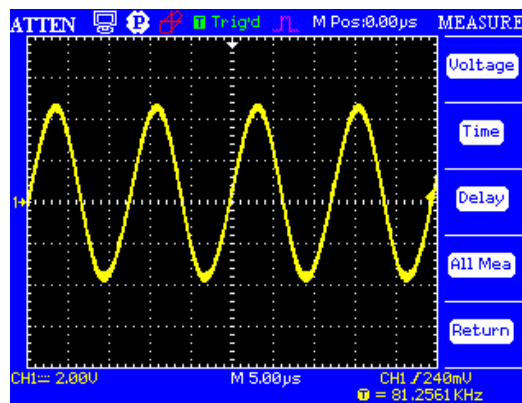

Picture 2-47

Table 2-21 Auto measure function 2-Voltage measure menu:

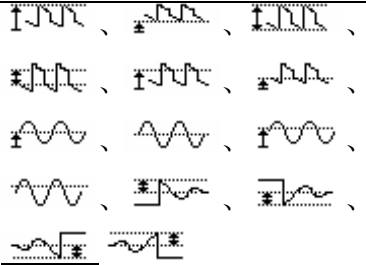
Option	Setting	Instruction
Source	CH1、CH2、MATH REFA、REFB	Select input signal source for Voltage measure.
Type	Vmax, Vmin, Vpp, Vamp, Vtop, Vbase, Cycle Mean, Mean, Cycle Vrms, Vrms, ROVShoot, FOVShoot, RPRESshoot, FPRESshoot	Press the “Type” button or turn the “Universal” knob to select Voltage measure parameter.
		Display the corresponding icon and measure value of your selected Voltage measure parameter.
Return		Return to the first page of auto measurement menu.

Table 2-22 Auto measure function3-Time measure menu:

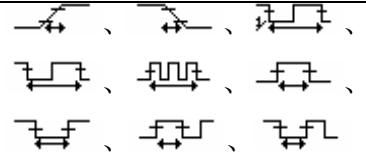
Option	Setting	Instruction
Source	CH1、CH2、MATH REFA、REFB	Select input signal source for Time measure.
Type	Rise Time、Fall Time、Freq、 Period、BWidth、+Width、 -Width、+Duty、-Duty	Press the “Type” button or turn the “Universal” knob to select Time measure parameter.
		Display the corresponding icon and measure value of your selected time measure parameter.
Return		Return to the first page of auto measurement menu.

Table 2-23 Auto measure function3-Delay measure menu:

Option	Setting	Instruction
Source	CH1、CH2、MATH	Select input signal source for Delay measure.


 
 

 
 



 
 
 
 
 

 
 
 

 
 


 
 
 
 
 
 
 
 
	REFA、REFB	
Type	Phase、FRR、FRF、FFR、FFF、 LRR、LRF、LFR、LFF	Press the “Type” button or turn the “Universal” knob to select Delay measure parameter.
		Display the corresponding icon and measure value of your selected Delay measure parameter.
Return		Return to the first page of auto measurement menu.

Table 2-24 All Measurement function menu:

Option	Setting	Instruction
Source	CH1 CH2	Select input signal channel.
Voltage	On Off	Turn on the all measurement function to measure voltage parameters. Turn of the all measurement function to measure voltage parameters.
Time	On Off	Turn on the all measurement function to measure Time parameters. Turn of the all measurement function to measure Time parameters.
Delay	On Off	Turn on the all measurement function to measure Delay parameters. Turn of the all measurement function to measure Delay parameters.
Return		Return to the “All Measure main menu”.

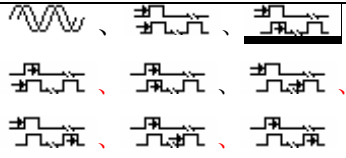2-25 Introduction of the Measure Type:


Measure Type	Introduction
V _{max} 	The most positive peak voltage measured over the entire waveform.
V _{min} 	The most negative peak voltage measured over the entire waveform.
V _{pp} 	Measures the absolute difference between the maximum and minimum peaks of the entire waveform.
V _{hig} 	Measures the highest voltage over the entire waveform.
V _{low} 	Measures the lowest voltage over the entire waveform.
V _{vamp} 	Voltage between V _{hig} and V _{low} of a waveform.
C _{Mea} 	The arithmetic mean over the first cycle in the waveform.
Mean 	The arithmetic mean over the entire waveform.
Crms 	The true Root Mean Square voltage over the first cycle in the waveform.
V _{rms} 	The true Root Mean Square voltage over the entire waveform.
ROV 	Defined as $(V_{max} - V_{hig}) / V_{vamp}$ after the waveform rising.
FOV 	Defined as $(V_{min} - V_{low}) / V_{vamp}$ after the waveform falling.
RPRE 	Defined as $(V_{min} - V_{low}) / V_{vamp}$ before the waveform rising.
FPRE 	Defined as $(V_{max} - V_{hig}) / V_{vamp}$ before the waveform falling.
Rise 	Rise Time Measures the time between 10% and 90% of the first rising edge of the waveform.
Fall 	Fall Time Measures the time between 90% and 10% of the first falling edge of the waveform.

BWid 	The duration of a burst. Measured over the entire waveform.
+ Wid 	+ Width Measures the time between the first rising edge and the next falling edge at the waveform 50% level.
- Wid 	-Width Measures the time between the first falling edge and the next rising edge at the waveform 50% level.
+ Duty Cycle 	Measures the first cycle waveform. Positive Duty Cycle is the ratio between positive pulse width and period.
- Dut 	Measures the first cycle waveform. Negative Duty Cycle is the ratio between negative pulse width and period.
Phas 	The amount one waveform leads or lags another in time. Expressed in degrees, where 360 degrees comprise one waveform cycle.
FRR 	The time between the first rising edge of source 1 and the first rising edge of source 2.
FRF 	The time between the first rising edge of source 1 and the first falling edge of source 2.
FFR 	The time between the first falling edge of source 1 and the first rising edge of source 2.
FFF 	The time between the first falling edge of source 1 and the first falling edge of source 2.
LRR 	The time between the first rising edge of source 1 and the last rising edge of source 2.
LRF 	The time between the first rising edge of source 1 and the last falling edge of source 2.
LFR 	The time between the first falling edge of source 1 and the last rising edge of source 2.
LFF 	The time between the first falling edge of source 1 and the last falling edge of source 2.

	and the last falling edge of source 2.
--	--

If you want to measure voltage parameters, please follow next steps:

- 1) . Press the “MEASURE” button to enter the “Auto measurement” menu.
- 2) . Press the top first option button to enter the “second measurement menu”.
- 3) . Select measure type. If you press the “Voltage” option button, “Voltage measurement” menu will display on the screen.
- 4) . Press the “Source” option button to select “CH1” or “CH2” according to input signal channel.
- 5) . Press the “Type” option button to select the parameter type that you want to measure. The corresponding icon and value will display below the measure parameter.

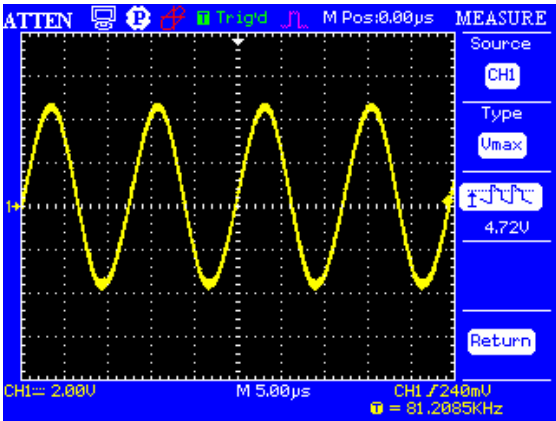

Picture 2-49


- 6) . Press the “Return” option button to return the home page of “Auto Measurement” menu. The selected parameter and the corresponding value will display on the top first position of the home page. You can display the other parameters and its’ value on the corresponding position using the same way, and the screen can display five parameters at one time.

If you want to measure time parameters using all measure function, please follow next steps:

- 1) . Press the “MEASURE” button to enter the “Auto Measure menu”.
- 2) . Press the top option button to enter the second page of “Auto

Measure menu”.

- 3) . Press “All Mea” option button to enter the “All Measure menu”.
- 4) . Press “Source” option button to select input signal channel.
- 5) . Press the “Time” option button to select “On”. Now all of time parameters value will display on the screen at the same time. (See Picture 2-48)

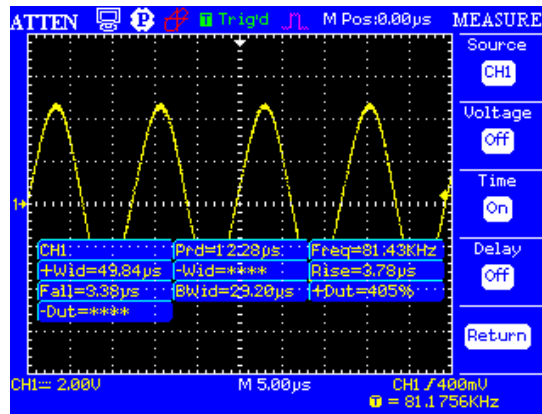

Picture 2-48

2.12 Storage System

Showing as follow picture, The SAVE/RECALL is the Storage System Functional Button.

Storage system control button



Picture 2-50

ADS2000 series can save 2 groups reference waveforms, 20 groups setups and 20 groups waveforms to the oscilloscope's internal memorizer. There is a USB Host interface in the front panel of the ADS2000 series oscilloscope and you can save setup data, waveform data, waveform interface image to a USB flash furthest at a time. Setup data and waveform data can be recalled to the current oscilloscope or the other same model oscilloscopes. Picture data can't be recalled to the oscilloscope, but it can be opened on the correlative computer software.

SAVE/RECALL SETUP


■ **Save Setup to Device:** The complete setup is stored in nonvolatile memory. When you recall the setup, the oscilloscope will be in the mode from which the setup was saved.

The oscilloscope saves the current setup if you wait three seconds after the last change before you power off the oscilloscope. The oscilloscope recalls this setup the next time you apply power.

Table 2-26 Save setup to device function menu:

Option	Setting	Introduction
Type	Setups	Menu for the Storage/Recall setting in the

		oscilloscope
Save to	Device	Save setup to the oscilloscope's internal memorizer.
Setup	No.1 to No.20	Press the "Setup" option button or turn the "universal" knob to select storage position.
Save		Accomplish the storage
Recall		Recall the storage in the "Setup" operation

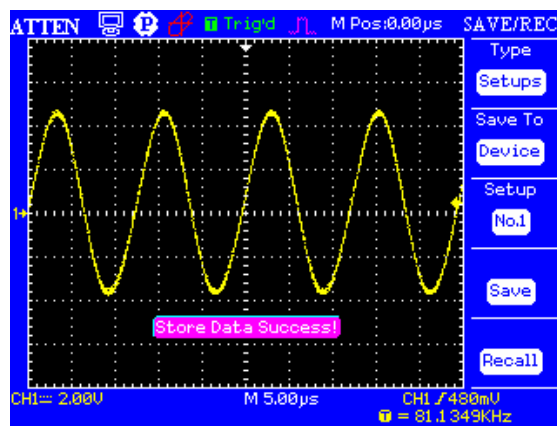

Picture 2-51

Save setups to the oscilloscope's internal memorizer, or recall saved setups from it .Follow these steps:

For example: Save setup that the oscilloscope displays waveform as the form of "Dots" to the oscilloscope's internal memorizer.

- 1) . Press the "SAVE/RECALL" button to enter the "SAVE/RECALL" menu.
- 2) . Press the "Type" option button to select "setups".
- 3) . Press the "Save to" option button to select "Device".
- 4) . Press the "Setup" option button to select "No.1".
- 5) . Press the "DISPLAY" button to enter the "Display" menu.
- 6) . Press the "Type" option button to select "Dots".
- 7) Press the "SAVE/RECALL" button to enter the "SAVE/RECALL" menu.
- 8) Press the "Save" option button.

If the display type has been changed, you want to recall this setup.


Follow these steps:

- 1) Press the “SAVE/RECALL” button to enter the “SAVE/RECALL” display menu.
- 2) Press the “Type” option button to select “Setups”.
- 3) Press the “Save to” option button to select “Device”.
- 4) Press the “Setup” option button or turn the “Universal” knob to select “No.1”.
- 5) Press the “Recall” option button.

■ **Save Setup to USB flash**

Table 2-27 Save setup to USB flash function menu:

Option	Setting	Introduction
Type	Setups	Menu for the Storage/Recall settings.
Save to	File	Save setup data to USB flash
Setup	No.00001 to No.99999	Press the “Setup” option button or turn the “universal” knob to select storage position.
Save		Accomplish the storage
Recall		Recall setup data from USB flash.

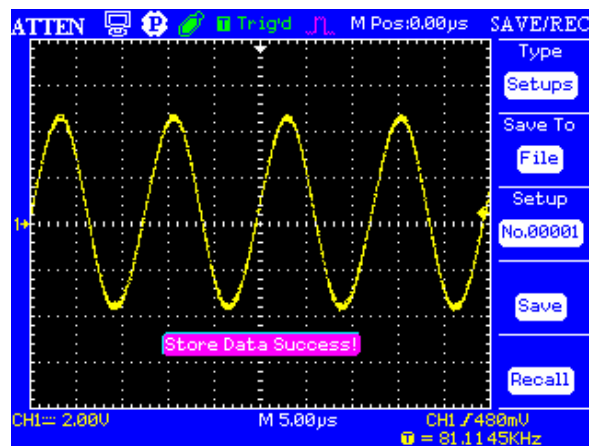

Picture 2-52

Save setup to USB flash, follow these steps:

For example: Save setup that the oscilloscope displays waveform as the form of “Dots” to the oscilloscope’s internal memorizer.

-
- 1) Press the “SAVE/RECALL” button to select “Setups”.
 - 2) Insert USB flash to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash (about ten seconds).
 - 3) Press the “Save to” option button to select “file”.
 - 4) Press the “Setup” option button or turn the “universal” knob to select storage position “No.00001”.
 - 5) Press the “DISPLAY” button to enter “Display” menu.
 - 6) Press the “Type” option button to select “Dots”.
 - 7) Press the “SAVE/RECALL” button.
 - 8) Press the “Save” option button (about ten seconds, there is a prompting message that “Save data success” displaying on the screen), now setup data have been saved to USB flash.

Recall setup data from USB flash, follow these steps:


- 1) Press the “SAVE/RECALL” button.
- 2) Press the “Type” button to select “Setups”.
- 3) Insert USB flash to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash (about ten seconds).
- 4) Press the “Save to” option button to select “File”.
- 5) Press the “Setup” option button or turn the “Universal” knob to select storage position “No.00001”.
- 6) Press the “Recall” option button (about five seconds, there is a prompting message that “Ready data success”), now setup data have been recalled from USB flash.

■ RECALL FACTORY

You can use this option to recall the factory setup.

Table 2-28 Factory function menu:

Option	Setting	Instruction
Type	Factory	To view the Factory setup
	Load	Recall the Factory setup

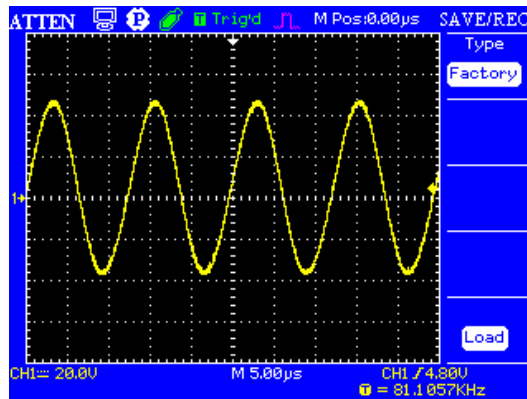


Picture 2-53

SAVE/RECALL WAVEFORM

- **SAVE/RECALL CAPTURED WAVEFORM:** The oscilloscope must display any waveform that you want to save. The oscilloscopes can store twenty captured waveforms in nonvolatile memory.
- **Save waveforms to Device**

Table 2-29 Save waveform to device function menu:

Option	Setup	Introduction
Type	waveforms	Menu for the Storage/Recall waveforms in the oscilloscope
Save to	Device	Save waveforms to the oscilloscope's internal memorizer.
waveform	No.1 to No.20	Press the “waveform” option button or turn the “Universal” knob to select storage position.
Save		Accomplish the storage.
Recall		Recall the storage in the “waveform” operation

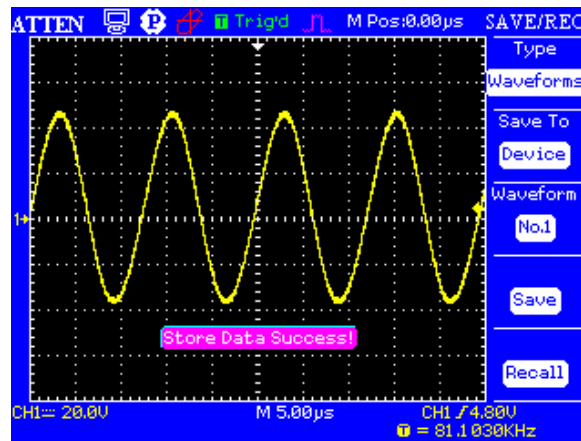

Picture 2-54

Save waveforms to the oscilloscope's internal memorizer, follow these steps:

- 1) . Input a 81KHZ sine signal to channel 1 and press the “Auto” button.
- 2) . Press the “SAVE/RECALL” button to enter “SAVE/RECALL” display menu.
- 3) . Press the “Type” option button to select “waveforms”.
- 4) . Press the “Save to” option button to select “Device”.
- 5) . Press the “waveform” option button or turn the “Universal” knob to select “No.1”.
- 6) . Turn the “Volts/div” knob or “S/div” knob to adjust the waveform that you want to need.
- 7) . Press the “Save” option button.

Recall the saved waveform from the oscilloscope's internal memorizer, follow these steps:

- 1) . Press the “SAVE/RECALL” button to enter “SAVE/RECALL” display menu.
- 2) . Press the “Type” option button to select “waveforms”.
- 3) . Press the “Save to” option button to select “Device”.
- 4) . Press the “waveform” option button or turn the “Universal” knob to select “No.1”.
- 5) . Press the “Recall” option button.

■ Save waveforms to USB flash

Table 2-30 Save waveforms to USB flash function menu:

Option	Setup	Introduction
Type	Waveforms	Menu for the Storage/Recall waveforms.
Save to	File	Save waveforms to USB flash.
Waveform	No.00001 to No.99999	Press the “waveform” option button or turn the “Universal” knob to select storage position.
Save		Accomplish the storage
Recall		Recall waveform data from USB flash.

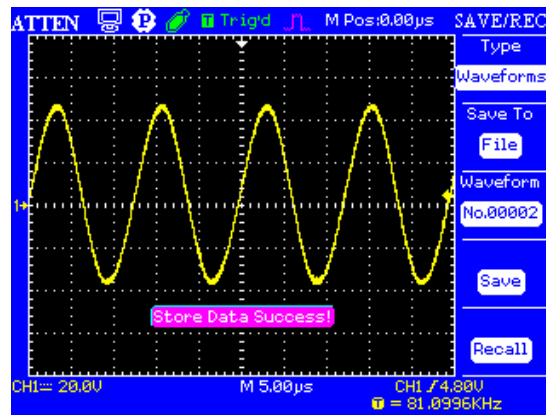


图 2-55

Save waveforms to USB flash, follow these steps:

- 1) Input a 81KHZ sine signal to channel 1, press the “AUTO” button.
- 2) Press the “SAVE/RECALL” button to enter the “SAVE/RECALL” display menu.
- 3) Press the “Type” option button to select “Waveforms”.
- 4) Insert USB flash to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash (about ten seconds).
- 5) Press the “Save to” option button to select “File”.
- 6) Press the “Waveform” option button or turn the “Universal” knob to select “No.00002”.
- 7) Turn the “Volts/div” knob and “S/div” knob to adjust the waveforms that you want to need.
- 8) Press the “Save” option button (about fifteen seconds, there is a prompting message that “Save data success” displaying on the screen), now waveform data have been saved to USB flash.

Recall saved waveform data form USB flash, follow these steps:


- 1) . Press the “SAVE/RECALL” button.
- 2) . Press the “Type” button to select “Waveforms”.
- 3) . Insert USB flash to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash (about ten seconds).
- 4) . Press the “Save to” option button to select “File”.
- 5) . Press the “Waveform” option button or turn the “Universal” knob to select “No.00002”.
- 6) . Press the “Recall” option button (about ten seconds, there is a prompting message that “Recall data success” displaying on the screen), now waveform data have been recalled from USB flash.

■ **Save Picture**

Waveform interface image can be saved to USB flash, but they can't be recalled. You can open them on correlative computer software.

Table 2-31 Picture storage function menu:

Option	Setting	Introduction
Type	Pictures	Menu for the Storage/Recall waveform interface image.
Print Key	Print Picture Save Picture	When the oscilloscope connect to the printer and “Back USB” option is set to “Printer”, select “Print Picture” and press the “S/div” button to print the screen image. When the USB flash insert to the USB Host interface(now the USB flash open status icon displays on the top of the screen), select “Save picture” and press the “S/div” knob to store the screen image to the USB flash.
Picture	No.00001 to No.99999	Press the “waveform” option button or turn the “Universal” knob to select storage position.
Save		Accomplish the storage

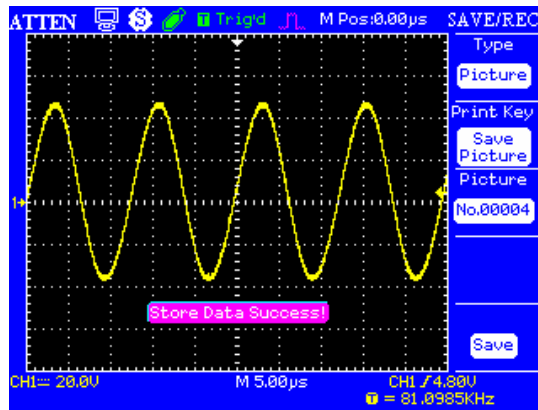

Picture 2-56

Save waveform interface image to USB flash, follow these steps:

- 1). Press the “SAVE/RECALL” button to enter “SAVE/RECALL” menu.
- 2). Press the “Type” option button to select “Pictures”.
- 3). Insert USB flash to USB host port of the oscilloscope and wait that the oscilloscope has initialized USB flash (about ten seconds).
- 4). Press the “Picture” option button or turn the “Universal” knob to select storage position “No.00004”.
- 5). Select the screen image that you want to need.
- 6). Press the “S/div” knob (about forty seconds, there is a prompting message that “Save data success” displaying on the screen), now picture data have been saved to USB flash.

■ **SAVE/RECALL REFERENCE WAVEFORM:**

The oscilloscopes can store two reference waveforms in nonvolatile memory.

The oscilloscope can display reference waveforms at a time.

Reference waveforms are not adjustable, but the oscilloscope does display the horizontal and vertical scales at the bottom of the screen.(Refer to 2.6.4)

2.13 Utility System



“UTILITY”: The Utility System Button.




Utility Setup button

Picture 2-57

Table 2-32 Utility System function menu 1:


Option	Setting	Introduction
System Status		Displays summaries of the oscilloscope settings
Sound	 	Open the key-press voice Close the key-press voice
Counter	On Off	Turn on Frequency Counter Turn off Frequency Counter
Language	Chinese English	Set up the menu in Chinese Set up the menu in English
Next Page	Page 1/3	Press this button to enter second page.

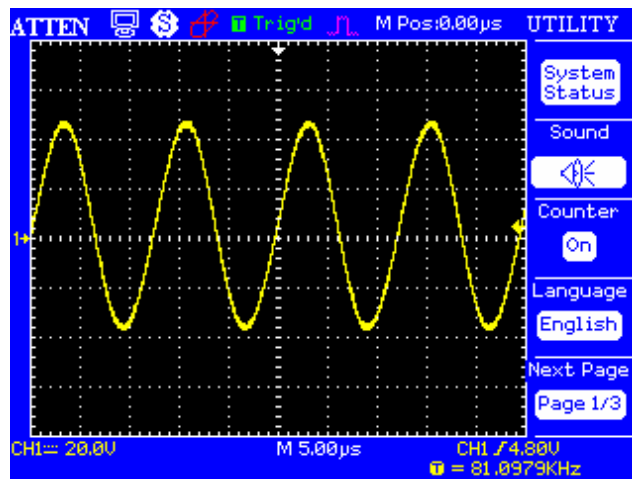

Picture 2-58

Table 2-33 Utility System function menu 2:


Option	Setting	Introduction
DO self cal		Auto self emendation
Do Self Test	Screen Test Keyboard Test LED Test	Run the screen detect program Run the keyboard detect program Run the dot lighten detect program
Back USB	Computer Printer	The oscilloscope connects to the printer using USB cable. When you execute print function, please select "Printer". Now the print icon displays on the top of the screen. The oscilloscope connects to the computer using USB cable. When you execute EasyScope software, please select "Computer". Now the computer icon displays on the screen.
Next Page	Page 2/3	Press this button to enter third page.

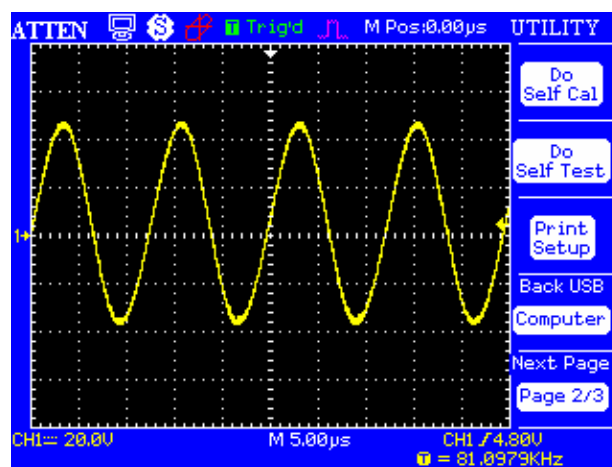

Picture 2-59

Table 2-34 Functional Menu of the Utility System 3:

Option	Setting	Introduction
Update firmware		You can update the oscilloscope use USB flash Driver(About need two minutes).
Pass/Fail		Pres this button to enter the “Pass/Fail menu”.
Next Page	Page 3/3	Press this button to enter first page.

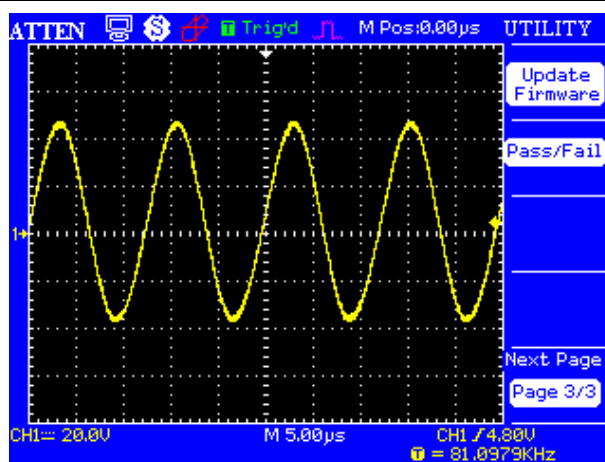

Picture 2-60

2.13.1 System status

Selecting “System Status” from the Utility Menu to display a series of information about this oscilloscope



Picture 2-61

Table 2-35 System status instruction:

Option	Introduction
Starup Times	List the open times
Software version	list the software version
Hardware Version	List the hardware version
Product type	List the product type
Serial No.	List the product serial number

2.13.2 Language

English and Chinese could be selected as the operation language in ADS2000 series.

Press the “Utility” button to select the “language” and you can choose the system language.


2.13.3 Print

ADS2000 Serials support PictBridge compatible printers. You can connect the back USB port of the oscilloscope to the USB port of the PictBridge compatible printer using the USB cable.

Table 2-36 Print setup option function menu 1:

Option	Setting	Introduction
Ink Saver	On Off	Prints the screen image on a white background when you select “on”. Print the color screen image when you select “off”.
Layout	Portrait Landscape	Printer output orientation.
Paper Size	Default, L, 2L, Hagaki Postcard, Card Size, 10 x 15 cm, 4" x 6", 8" x 10",	Displays Settings available on your PictBridge compatible printer.

	Letter, 11" x 17", A0, A1, A2, A3, A4, A5, A6, A7, A8, A9, B0, B1, B2, B3, B4, B5, B6, B7, B8, B9, 89 mm, Roll (L), 127 mm Roll (2L), 100 mm Roll (4"), 210 mm Roll(A4)	
Print Key	Print Key Print Picture	Select "Print Picture" option when the oscilloscope connects to the printer, press the "S/div" knob to print the picture. Select "Save Picture" option when you insert the USB flash, press the "S/div" knob to save the picture.
Next Page	Page 1/2	Press this option button to enter next page menu.

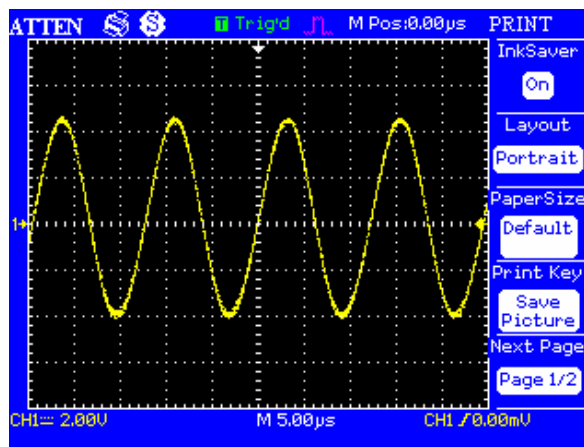

Picture 2-62

Table 2-37 Print setup option function menu 2:


Option	Setting	Introduction
Image Size	Default, 2.5x3.25 in, L (3.5x5 in), 4x6 in, 2L (5x7 in), 8x10 in, 4L (7 x 10 in), E, Card, Hagaki card, 6 x 8 cm, 7x10 cm, 9x13 cm, 10x15 cm, 13x18 cm, 15x21 cm, 18x24 cm, A4, Letter	Displays Settings available on your PictBridge compatible printer.
Paper Type	Default, plain, Photo, Fast Photo	

Print Quality	Default, Normal, Draft, Fine	
ID Print	Default, On, Off	
Next Page	Page 2/2	Press this button to enter first page of print setup menu.

Note: 1. The Printer may override your selection for best fit.

2. If your selection is not supported by the printer, the oscilloscope uses the Default setting.

3. The oscilloscope was designed to print to any PictBridge compatible printer. Refer to product documentation for your printer to determine if the printer is PictBridge compatible.

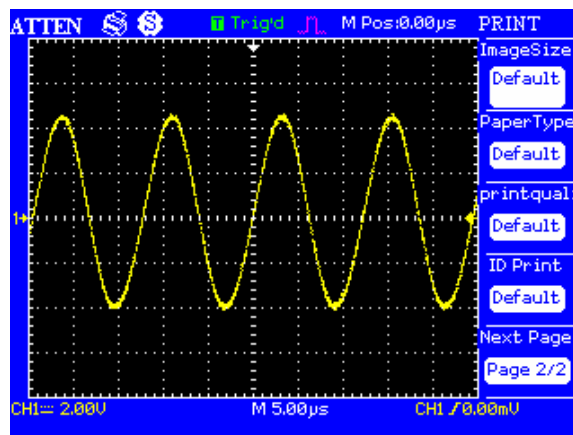

Picture 2-63

To print screen picture, follow these steps:

1. Connect the oscilloscope to a PictBridge compatible printer.

- 1) Insert one end of a USB cable into the USB Device port on the oscilloscope.
- 2) Insert the other end of the cable into the PictBridge port on a PictBridge compatible printer.

2. Print a Screen image

- 1) Power on the oscilloscope and the printer (The printer recognizes the oscilloscope only when the printer is powered on).
- 2) Press the UTILITY button to display “UTILITY” menu.
- 3) Press the “Next Page” option button.

-
- 4) Press the “Print Setup” option button to display “Print setup” menu.
 - 5) Set up the print setup option according to your need. The oscilloscope queries the printer, and only displays options and values that the printer supports.

If you are not sure which setting to choose, select “Default” for each option.


- 6) Press the “Print Key” option button to select “Print Picture”.
- 7) Press the “S/div” knob to print screen image.

The oscilloscope takes a few seconds to capture the screen image. The settings of your printer and print speed determine how long it takes to print the data. Additional time may be required according to the format selected.

Note: 1. You can use the oscilloscope while the printer prints.
2. If printing fails, check that the USB cable is connected to the PictBridge port on the printer, and try again.

2.13.4 Self Calibration

When you operate the self Calibration, you should cut all the probes and lead. Then press the “Utility” button to choose the “Do self cal” to show the self Calibration Menu, and execute self calibration program according to the prompting on the screen.

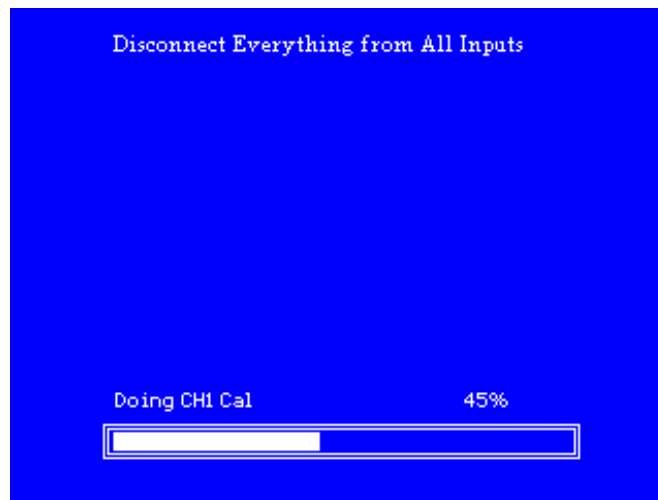

Picture 2-64

2.13.5 Self Test

Press “UTILITY”→ “Do Self Test”


Table2-38

Option	Introduction
Screen Test	Run Screen Test Program
Keyboard Test	Run Keyboard Test Program
LED Test	Run LED Test Program

Operation Steps:

1. Screen Test:

Select “Screen Test” to enter the screen test interface. The clew words “Press ‘SINGLE’ Key to continue, Press ‘RUN/STOP’ Key to exit” is displayed, you could press the “Single” for test.

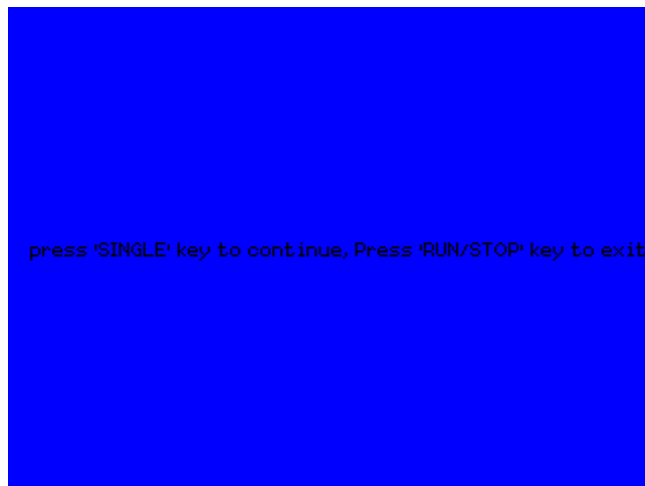

Picture 2-65


2. Keyboard Test

Select “keyboard Test” to enter the key test interface, the on-screen lathy rectangle shapes represent the front panel keys. The shapes with two arrows beside them represent the front panel knobs. The squares represent the knob presses for scale knobs. Test all keys and knobs and you should also verify that all the backlit buttons

illuminate correctly.

Note:


- When you operate, the screen would display the white (Color LCD) and black (single LCD) repose.
- The tested button or knobs corresponding area would display the green (Color LCD) or white (single LCD).
- At the bottom of the screen display “Press ‘ RUN/STOP’ Key Three Times to exit” information prompt to show that press “RUN/STOP”3 times for quite the test .

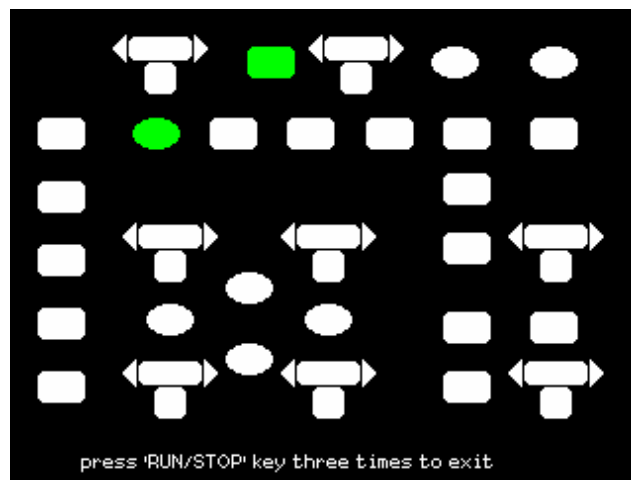

Picture 2-66

3. LED test

- Select “LED Test” to enter the lighten interface, the on-screen lathy rectangle shapes represent the front panel keys; the lathy rectangle shapes represent the front panel knobs. The squares represent the knob presses for scale knobs. The clew words “Press ‘SINGLE’ Key to continue , Press ‘RUN/STOP’ Key to exit” is displayed, you could press the “Single” continuously for test, when buttons are lighted ,the corresponding area on the screen would display green(Color LCD) or white(Single LCD).

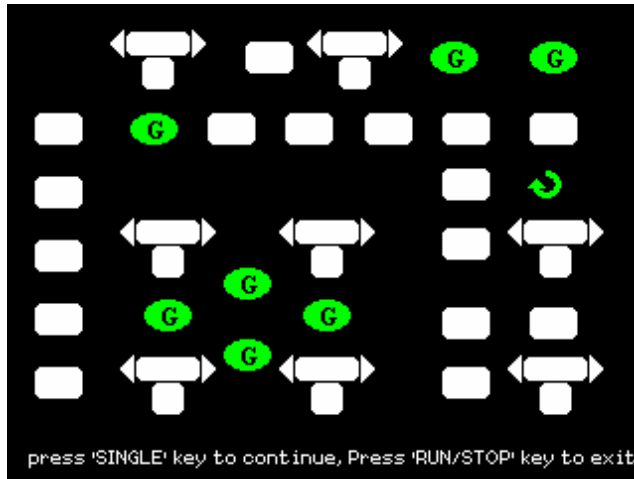


Picture 2-67

2.13.6 Pass/Fail

The Pass/Fail function can monitor changes of signals and output pass or fail signals by judging the input signal is within the predefined mask or not.

Table 2-39 Pass/Fail function menu 1:


Option	Setting	Instruction
Enable	Open	Turn on Pass/Fail function
	Off	Turn off Pass/Fail function
Source	CH1	Select Pass/Fail test on CH1
	CH2	Select Pass/Fail test on CH2
Operate	▶	Press to run the Pass/Fail test
	■	Press to stop the Pass/Fail test
Msg Display	Open	Turn on times information display of the waveform pass/fail
	Off	Turn off times information display of the waveform pass/fail
Next Page	Page 1/2	Press this button to enter second page of Pass/Fail menu.

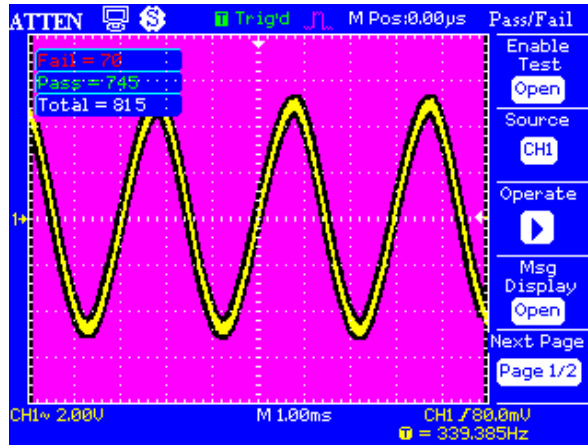

Picture 2-68

Table 2-40 Pass/Fail function menu 2:

Option	Setting	Instruction
Output	Pass Fail	Output when pass condition detected. Output when fail condition detected.
Stop On Output	On Off	Stop test when output occur Continue test when output occur
Mask Setting		Press this button to enter the “Mask Setting menu”.
Return		Return to the Pass/Fail main menu.
Next Page	Page 2/2	Return the first page of the Pass/Fail menu.

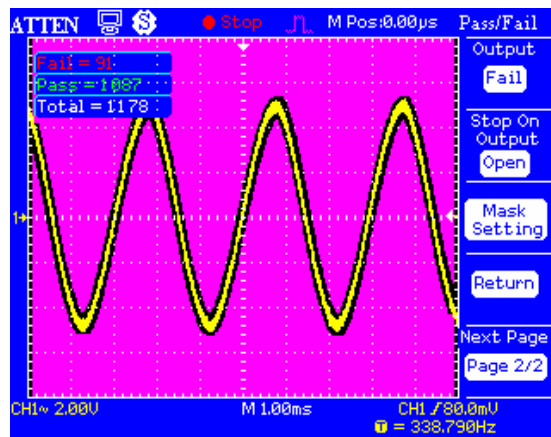


Picture 2-69

Table 2-41 Mask Setting function menu 1:

Option	Setting	Instruction
X Mask		Turn the “Universal” knob to set the range of horizontal clearance to the waveform.


↻ xdiv	/	<0.04div-4.00div>
Y Mask ↻ ydiv	/	Turn the “Universal” knob to set the range of vertical clearance to the waveform. <0.04div-4.00div>
Create Mask	/	Create a test mask according to the above clearance.
Location	Internal External	Select position to store created mask.
Next Page	Page 1/2	Press this button to enter the second page of “Mask Setting menu”.

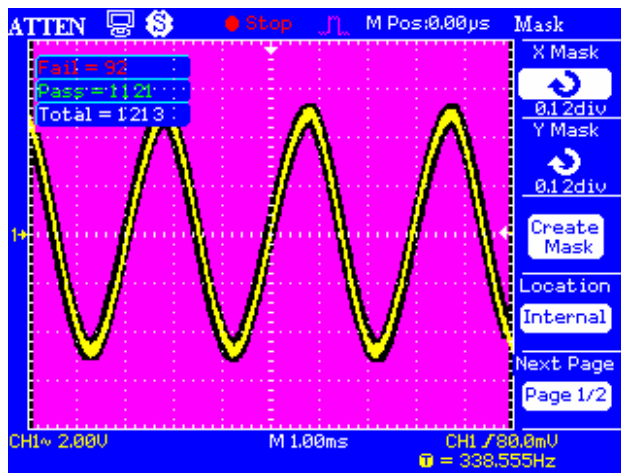

Picture 2-70

Table 2-42 Mask Setting function menu 2:

Option	Setting	Instruction
Save	/	Store created mask setting.
Load	/	Recall stored mask setting.
Return	/	Return to the main menu of mask setting.
Last Page	Page 2/2	Return to the first page of the “Mask Setting menu”.

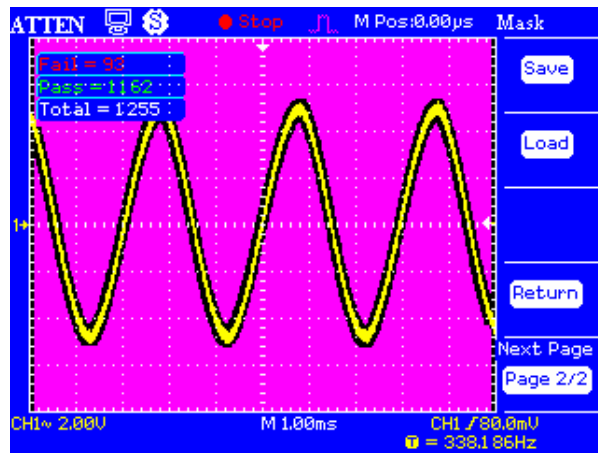


Picture 2-71

RUN Pass/Fail test, please follow next page:

- 1) Press UTILITY button to enter the “Utility menu”.
- 2) Press the “Next Page Page1/3” option button.
- 3) Press the “Next Page Page2/3” option button to enter the third page of “Utility menu”
- 4) Press the “Pass/Fail” option button to enter the “Pass/Fail” function menu.
- 5) Press the “Enable Test” option button to select “Open”.
- 6) Press the “Source” option button to select input signal channel.
- 7) Press the “Next Page Page1/2” option button to enter the second page of the “Pass/Fail menu”.
- 8) Press the “Mask Setting” option button to enter the first page of “Mask menu”.
- 9) Press the “X Mask” button, turn the “Universal” knob to adjust the horizontal clearance.
- 10) Press the “Y Mask” button, turn the “Universal” knob to adjust the vertical clearance.
- 11) Press the “Create Mask” button to create mask and you also can enter the next page of “Mask menu” to recall the stored mask.
- 12) Enter the second page of “Pass/Fail function menu”, press the “Output” option button to set the output option.

13) Enter the first page of “Pass/Fail function menu”, press the “Operate” option button to select “▶” to run the pass/fail test.

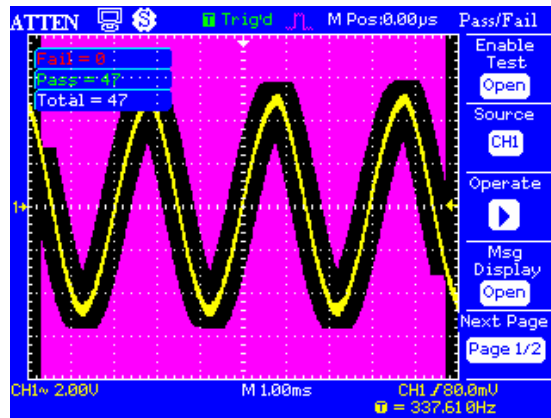


Picture 2-72

2.14 Online Help Function

ADS2000 serial oscilloscope has an online help function that supply multi-language help information, and you can recall them to help you operate the oscilloscope when you need.

Press the “Universal” knob to enter the help status, then press every button to recall the corresponding help information. Note: If you want to see help information of SINGLE button and RUN/STOP button, you need to see them when you first enter the help status because you press the SINGLE button can enter next page of help information and Press the RUN/STOP button can return to the first page of help information when other button’s help information exceed one page.

Submenus of every main menu all have themselves’ help information. Note: If you need to see help information of next page submenus, you need to first press the “Universal” knob to exit the help status and switch to next page menu then press the “Universal” knob to enter the help status again and press the submenu option buttons to see themselves’ help information.

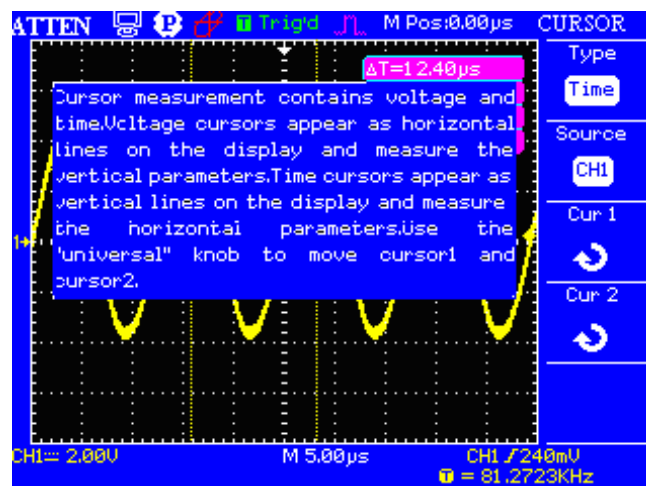

Picture 2-73

Chapter3 Application Examples

This section presents a series of application examples. These simple examples highlight the features of the oscilloscope and give you ideas for using it to solve your own test problems.

- ◆ Taking simple measurements
- ◆ Taking cursor measurements
- ◆ Capturing a single-shot signal
- ◆ Analyzing signal detail
- ◆ Triggering on a video signal
- ◆ Application of X-Y function
- ◆ Analyzing a differential communication signal using math functions

3.1 Taking Simple Measurements

Observe a unknown signal in a circuit, display the signal quickly and measure the frequency and peak-to-peak amplitude.

1. Using Auto set

To quickly display a signal, follow these steps:

1. Press the CH 1 button, set the Probe option attenuation to 10X and set the switch to 10X on the probe.
2. Connect the channel 1 probe to the signal.
3. Press the AUTO button.

The oscilloscope sets vertical, horizontal, and trigger controls automatically. If you want to optimize the display of the waveform, you can manually adjust these controls.

NOTE. The oscilloscope displays relevant automatic measurements in the waveform area of the screen based on the signal type detected.

2. Taking Automatic Measurements

The oscilloscope can take automatic measurements of most displayed signals. To measure signal frequency and peak-to-peak amplitude, follow these steps:

(1) Measure signal frequency

- Input the signal to channel 1.
- Press the “AUTO” button.
- Press the “MEASURE” button to see “auto Measure Menu”.
- Press the top option button.
- Press the “Time” option button to enter the “Time Measure menu”.
- Press the “Source” option button to select input signal channel.
- Press the “Type” option button to select “Freq”.

The corresponding icon and measure value will display on the third option area.

(2) Measure signal peak-to-peak amplitude

- Press the “MEASURE” button to display “auto measure menu”.
- Press the top second option button.
- Press the “Voltage” option button to enter the “Voltage measure menu”.
- Press the “Source” option button to select input signal channel.
- Press the “Type” option button to select “Vpp”.

The corresponding icon and measure value will display on the third option area.

3.2 Taking Cursor Measurements


You can use the cursors to quickly take time and voltage measurements on a waveform.

3.2.1 Measuring Ring Frequency

To measure the ring frequency at the rising edge of a signal, follow these steps:

- 1). Press the “CURSORS” button to see the “Cursor Menu”.
- 2). Press the “Type” option button and select “Time”.
- 3). Press the “Source” option button and select “CH1”.
- 4). Press the “Cur1” button and turn the universal knob to place the cursor 1 on the first peak of the ring.
- 5). Press the “Cur 2” button and turn the universal knob to place the cursor 2 on the second peak of the ring.

You can see the delta time and frequency (the measured ring frequency) on the top right of the screen.

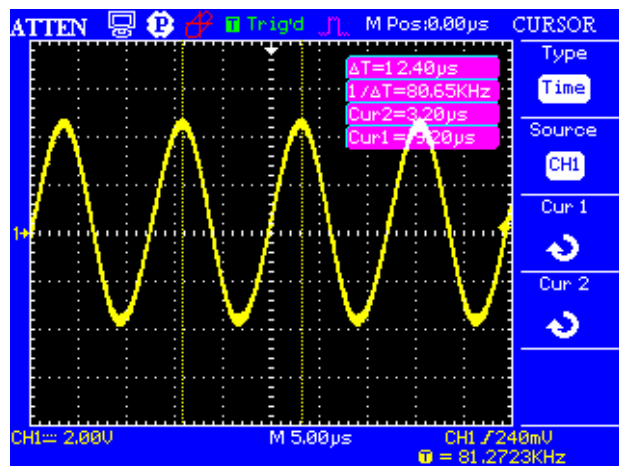

Picture 3-1


3.2.2 Measuring Ring Amplitude

To measure the amplitude, follow these steps:

1. Press the “CURSORS” button to see the Cursor Menu.
2. Press the “Type” option button and select “Voltage”.
3. Press the “Source” option button and select “CH1”.
4. Press the “cur1” option button and turn the universal knob to place the cursor 1 on the highest peak of the ring.
5. Press the “cur2” option button and turn the universal knob to place the cursor 2 on the lowest peak of the ring.

You can see the following measurements on the top right of the screen:

- The delta voltage (peak-to-peak voltage of the ringing)
- The voltage at Cursor 1.
- The voltage at Cursor 2.

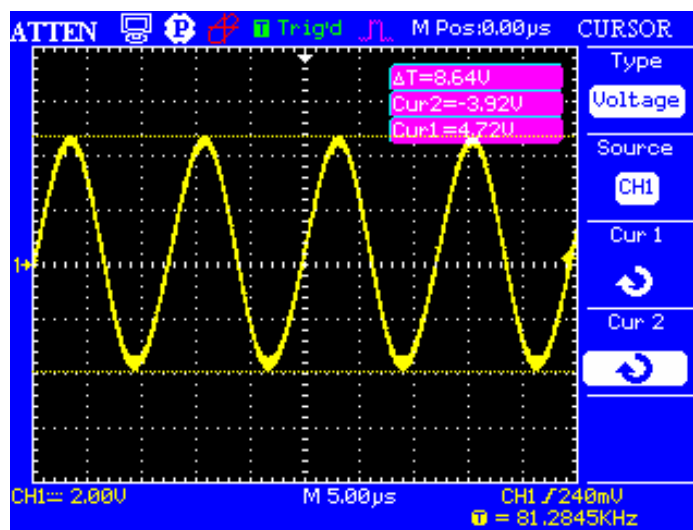

Picture 3-2

3.3 Catch the single signal

To capture a single event, you need to gather some pre-test knowledge of the signal in order to correctly set up the trigger level and slope .if you are not sure the instance of the signal, you can observe it through auto or normal trigger mode to ensure the trigger level and slope.

The following steps show you how to use the oscilloscope to capture a single event.

1. Set the Probe option attenuation to 10X and set the switch to 10X on the probe.
2. Trigger set up :
 - (1) Press “TRIG MENU” button to show the “Trigger Menu”
 - (2) Under this menu, set the trigger type to “edge”, Edge type is “Rising”, source is “CH1”, trigger mode is “Single”, coupling is “DC”
 - (3) Adjust the horizontal time base and vertical scale to the satisfied range
 - (4) Turn the “LEVEL” knob to adjust the trigger level
 - (5) Press the “RUN/STOP” button to start capturing

When the trigger conditions satisfied, data appears on the display representing; the data points that the oscilloscope obtained with one acquisition and press the RUN/STOP button again rearms the trigger circuit and erases the display.

3.4 Analyze the signal detail

You have a noisy signal displayed on the oscilloscope and you need to know more about it. You suspect that the signal contains much more detail than you can now see in the display.

3.4.1 Looking at a Noisy Signal

The signal appears noisy and you suspect that noise is causing problems in your circuit. To better analyze the noise, follow these steps:

- 1) Press the “ACQUIRE” button to see the acquire menu.
- 2) Press the “Peak Detect” option button.
- 3) If necessary, press the “DISPLAY” button to see display menu. Use “contract + ” or “contract –” option button to adjust contrast to see the noise more easily.
- 4) . Peak detect emphasizes noise spikes and glitches in your signal, specially when the time base is set to a slow setting.

3.4.2 Separating the Signal from Noise

To reduce random noise in the oscilloscope display, follow these steps:

- 1) Press the “ACQUIRE” button to display the acquire menu.
- 2) Press the “Average” option button.
- 3) Press the “Averages” option button to see the effects of varying the number of running averages on the waveform display.

Averaging reduces random noise and makes it easier to see detail in a signal.

3.5 Triggering on a Video Signal

Observe the video circuit in a piece of medical equipment and Use the video trigger to obtain a stable display.

3.5.1 Triggering on Video Field

To trigger on the video fields, follow these steps:

- 1) Press the “TRIGMENU” button to see “trig menu”
- 2) .Press the top option button and select “Video”.
- 3) .Press the “source” option button and select “CH1”.
- 4) . Press the “Sync” option button and select “Odd Field” or “Even Field”.
- 5) . Press the “Standard” option button and select “NTSC”.
- 6) . Turn the horizontal “S/Div” knob to see a complete field across the screen.
- 7) . Turn the vertical “Volts/Div” knob to ensure that the entire video signal is visible on the screen.

3.5.2 Triggering on Video Lines

To trigger on the video lines, follow these steps:

- 1) .Press the “TRIGMENU” button to see the trig menu
- 2) .Press the top “option” button and select “Video”.
- 3) . Press the “Sync” option button and select “Line Num” and turn the universal knob to set a specific line number.
- 4) .Press the “Standard” option button and select “NTSC”.
- 5) . Turn the “S/Div” knob to see a complete video line across the screen.
- 6) . Turn the “Volts/Div” knob to ensure that the entire video signal is visible on the screen.

3.6. Application of X-Y function

Viewing Impedance Changes in a Network


Connect the oscilloscope to monitor the input and output of the circuit

To view the input and output of the circuit in an XY display, follow these steps:

- 1) Press the “CH 1” MENU button and set the Probe option attenuation to 10X.
- 2) Press the “CH 2” MENU button and set the Probe option attenuation to 10X.
- 3). Set the switches to 10X on the probes.
- 4). Connect the channel 1 probe to the input of the network, and connect the channel 2 probe to the output.
- 5). Press the “AUTO” button.
- 6). Turn the “Volts/div” knobs to display approximately the same amplitude signals on each channel.
- 7). Press the DISPLAY button.
- 8). Press the Format option button and select “XY”.

The oscilloscope displays a Lissajous pattern representing the input and output characteristics of the circuit.

- 9). Turn the VOLTS/DIV and VERTICAL POSITION knobs to optimize the display.
- 10). Press the “Persist” option button and select “Infinite”.
- 11). Press the “ Contrast - ” or “Contrast + ” option buttons to adjust the contrast of the screen.
- 12). Apply the Ellipse method to observe the phase difference between the two channels

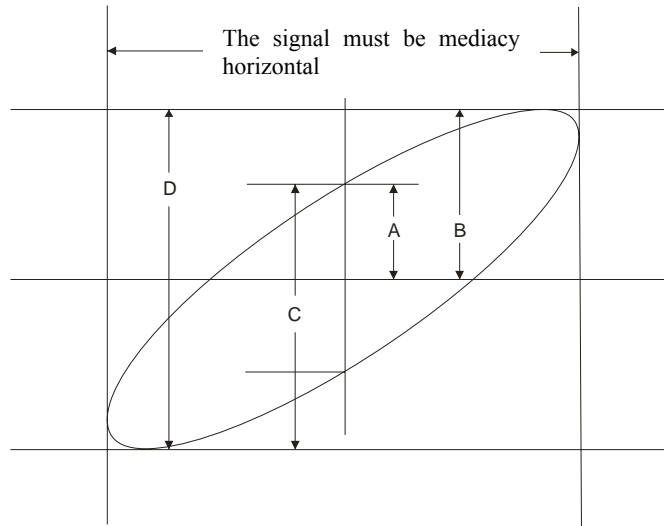

Picture 3-3

$\sin\theta = A/B$ or C/D where $\theta =$ phase shift (in degrees) between the two signals. From the formula above, you could get:

$$\theta = \pm \arcsin(A/B) \text{ or } \pm \arcsin(C/D)$$

If the main axis of the ellipse is at I and III quadrant, θ must be in the range of $(0 \sim \pi/2)$ or $(3\pi/2 \sim 2\pi)$. If the main axis is at II and IV quadrant, θ must be in the range of $(\pi/2 \sim \pi)$ or $(\pi \sim 3\pi/2)$.

3.7 Analyzing a Differential Communication Signal

You are having intermittent problems with a serial data communication link, and you suspect poor signal quality. Set up the oscilloscope to show you a snapshot of the serial data stream so you can verify the signal levels and transition times.

Because this is a differential signal, you use the math function of the oscilloscope to view a better representation of the waveform.

To activate the differential signals connected to channel 1 and channel 2, follow these steps:

- 1). Press the CH 1 button and set the Probe option attenuation to 10X.
- 2). Press the CH 2 button and set the Probe option attenuation to 10X.
- 3). Set the switches to 10X on the probes.
- 4). Press the AUTO button.
- 5). Press the “MATH” button to see the Math Menu.
- 6). Press the “Operation” option button and select “—”.
- 7). Press the “CH1 — CH2” option button to display a new waveform that is the difference between the displayed waveforms.
- 8). You can adjust the vertical scale and position of the Math waveform. To do so, follow these steps:
 - a. Remove the channel 1 and channel 2 waveforms from the display.
 - b. Turn the CH 1 and CH 2 VOLTS/DIV and VERTICAL POSITION knobs to adjust the vertical scale and position.

NOTE. Be sure to first compensate both probes. Differences in probe compensation appear as errors in the differential signal.

Chapter 4 prompting messages and troubleshooting

4.1 Prompting messages:

- **Trig level at limit:** Mention you that the trigger Level is at a limit when you turn the Trig level knob.
- **Horizon position at limit:** Mention you that the horizontal position is at a limit when you turn the horizon position knob.
- **Volts/Div at limit:** Mention you that the vertical voltage have already touched the Min 2MV/div or Max 5V/div.
- **Volts position at limit:** The system would display this information when the vertical position is at a limit.
- **Sec/Div at limit:** Prompts that the Volts/Div is at full range while turning the vertical scale knob.
- **Functions isn't useable:** Under several special modes, the some functions could not be running.
- **No signal!:** The system would clew this information when the signal could not match the auto set condition. (Using in the auto set)
- **Adjust at limit:** You could adjust the pulse width by the universal knob till the pulse width has reached min20.0ns or max 10.0s.
- **Location Empty:** If you have no stored waveforms or setups on some location, the screen will display this information when you pressing the "Recall" button on this location.
- **USB Flash Drive Plug In! :** This information will appear when you invert the USB Flash Drive to the USB Host port.
- **USB Flash Drive Pull Out! :** This information will appear when you pull out the

USB Flash Drive.

- **Store Data Success!:** Save setup data, waveform data or picture data to the internal of the oscilloscope or USB flash successful.
- **Ready Data Success!:** Read setup data or waveform data from the internal of the oscilloscope or USB flash successful.
- **Please set Back USB to printer!:** Press the “S/div” knob will appear this information on the screen when the “Print Key” option is set to “Print Picture” and the “Back USB” option is set to “Computer”.
- **USB Flash Drive isn’t connected!:** When the “Save To” option is set to “File” or the “Print Key” option is set to “Save Picture” in “Save/Recall” menu , Press the “Save” option button or the “S/div” knob before inverting the USB Flash Drive to the USB Host port will appear this information on the screen.

4.2 Troubleshooting

1. After the oscilloscope is powered on, the screen remains dark , please do as following steps:

- (1) Check the power cable's connection.
- (2) Ensure the power switch is turned on.
- (3) After the inspections above, restart the oscilloscope.
- (4) If the oscilloscope is still not used after the checking, please connect with ATTEN company.

2. If there is no signal wave in the screen after gathering the signal, please do as following steps:

- (1) Check the probe connecting with the signal cable or not
- (2) Check the signal cable connecting with the BNC connector or not.
- (3) Check the probe whether connect with the goods tested or not.
- (4) Check the tested goods produce the signal or not.
- (5) Gather the signal again.

1. The value of the tested voltage is 10 times higher/lower than the real one , please do as following steps::

Check the attenuation quotiety whether match the probe attenuation proportion or not.

4. Display the wave, but not steady , please do as following steps::

- (1) Check the signal source on the trigger interface whether or not match the signal channel.
- (2) Check the trigger mode: normal signal should use the “edge” trigger mode. The video signal should use the “Video” Trigger mode. The signal would display steady, only using the matching trigger mode.
- (3) Attempt to change the “ coupling” into “HF Reject” or “LF Reject” display, so that the High/low frequency noise disturb the trigger should be filtrated

5. Press “RUN/STOP” button, but no display.

Check the trigger mode on the trigger interface whether or not in the “normal” or “single”, and check the trigger level is whether or not over the wave range. If yes, please put the trigger level to the middle position or set the trigger mode to the “Auto” position. In another hand, you could choose the “Auto” button to set up automatically.

6. After the Acquisition is set to Averages or Display Persistence time is set too long, the waveform refreshes slowly.

It is normal in these settings

7. The signal is displayed as ladder like waveform

(1) This phenomena is normal. The time base maybe is too slow .you should turn the horizontal SCALE knob to increase horizontal resolution to improve the display.

(2) Maybe the display Type is set to “Vectors”, You could set it to Dots mode to improve the display.

Chapter 5 Service and Support

5.1 Maintain summary

ATTEN warrants that the products that it manufactures and sells will be free from defects in materials and workmanship for a period of three (3) years from the date of shipment from an authorized ATTEN distributor. If a product or CRT proves defective within the respective period, ATTEN will provide repair or replacement as described in the complete warranty statement.

To arrange for service or obtain a copy of the complete warranty statement, please contact your nearest ATTEN sales and service office.

Except as provided in this summary or the applicable warranty Statement, ATTEN makes no warranty of any kind, express or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose. In no Event shall ATTEN be liable for indirect, special or Consequential damages

5.2 Contract us

MTR Add: Building A29, Tanglang Industrial zone, Xili, Nanshan, Shenzhen,
518055, P.R.China

Tel: 86-755-8602 1373 8602 1372

Fax: 86-755-8602 1337

E-mail: atten@atten.com.cn

<http://www.atten.com.cn>

Appendix A: Specifications

All specification apply to 10X probe and All ADS2000 Digital Storage Oscilloscopes.

To verify that the oscilloscope meets specifications, the oscilloscope must first meet the following conditions:

- The oscilloscope must have been operating continuously for twenty minutes within the specified operating temperature.
- You must perform the Do Self Cal operation, accessible through the Utility menu, if the operating temperature changes by more than 5° C.
- The oscilloscope must be within the factory calibration interval

All specifications are guaranteed unless noted “typical.”

Specifications

Inputs	
Input Coupling	AC, DC,GND
Input Impedance	1MΩ 13Pf, 50Ω(ADS2202C/CA/S/SA, ADS2152C/CA/S/SA) 1MΩ 13Pf(ADS2102C/CA,ADS2102S/SA, ADS2062C/CA,ADS2062S/SA, ADS2042C/CA, ADS2042S/SA, ADS2022C/CA, ADS2022S/SA)
Probe Attenuator	1X、 10X
Probe Attenuator Factors Set	1X、 10X、 100X、 1000X

Signal Catching System	
Sample Types	Real time, Random
Memory depth	Each channel at least 4k / CH
Peak Measure	When you see the signal at the slow speed (from 10μs/div start) , you can capture high-frequency burr which are narrow to 10ns.
Catch mode	Sample, Peak Measure, Average
Averages	4, 16, 32, 64, 128, 256

Vertical System	
Vertical Sensitivity	2mV - 5V/div(1-2-5 order)
Channel voltage offset range	2mV – 100mV: ±2V 200mV - 5V: ±40V
Vertical Resolution	8 bit
Channels	2
Analog Bandwidth	200MHz(ADS2202CA/ADS2202C/ADS2202SA/ADS2202S) 150MHz(ADS2152CA/ADS2152C/ADS2152SA/ADS2152S) 100MHz(ADS2102CA/ADS2102C/ADS2102SA/ADS2102S) 60MHz(ADS2062CA/ADS2062C/ADS2062SA/ADS2062S) 40MHz(ADS2042C/ADS2042CA/ADS2042S/ADS2042SA) 25 MHz(ADS2022C/ADS2022CA/ADS2022S/ADS2022SA)
Single-shot Bandwidth	Full bandwidth (ADS2000CA/SA)、50MHz(ADS2000C/S)
Lower frequency limit (AC -3dB)	≤5Hz(at input BNC)
Vertical nicety error	±3.0%
Raise time	<1.8ns, <2.3ns, <3.5ns, <5.8 ns , <8.8ns, <14 ns correspondingly at bandwidth of (200MHz, 150MHz, 100MHz, 60MHz)
Vertical input coupling	AC, DC, GND
Math operation	+, -, *, /, FFT
FFT	Window mode: Hanning, Hamming, Blackman, Rectangular Sampling points: 1024
Band width limited	20MHz (-3dB)(ADS2022C/S No this function)

Horizontal System	
Real Time Sampling Rate	Sampling rate 1GSa/s or 500MSa/s
Equivalent Sampling Rate	50GSa/s
Measure Display Modes	MAIN, WINDOW, WINDOW ZOOM, ROLL, X-Y
Horizontal nicety error	±0.01%
Horizontal Scan Range	2.5nS/DIV - 50S/DIV(ADS2202C/CA/S/SA, ADS2152C/CA/S/SA,ADS2102C/CA/S/SA) 5nS/DIV - 50S/DIV(ADS2062C/CA/S/SA) 10nS/DIV - 50S/DIV(ADS2042 C/CA/S/SA) 25nS/DIV - 50S/DIV(ADS2022 C/CA/S/SA) Roll: 100mS/DIV ~50S/DIV (1-2-5 sequence r)
Delay range	Pretrigger : 12 DIV, Delay trigger: 1300 DIV
When Sampling rate is at 1GSa/s, only one channel is available for use.	

Trigger System	
Trigger Types	Edge, Pulse Width, Video
Trigger Modes	Auto, normal, Single
Trigger Coupling	AC, DC, LF rej, HF rej
Trigger Level Range	CH1、CH2:±12 divisions from center of screen
	EXT: ±2.4V
	EXT/5: ±12V
Trigger Displacement	Pretrigger : 12 DIV, Delay Trigger: 1300 DIV
Holdoff range	100ns – 1.5s
Edge Trigger	Trigger Polarity: Rise Edge, Fall Edge
Pulse Width Trigger	Trigger Modes: (>, <, =)positive Pulse Width, (>, <, =)Negative Pulse Width
	Pulse Width Range; 20ns – 10s
Video Trigger	Support signal Formats; PAL/SECAM, NTSC
	Trigger condition ; odd field, even field, all lines, line Num

X-Y Mode	
X-pole Input / Y-Pole Input	Channel 1 (CH1) / Channel 2 (CH2)
Phase Error	±3 degrees
Sample Frequency	XY mode has a breakthrough that trad oscilloscopes restrict sampling rate at 1MSa/s and support 5KSa/s~200MSa/s (1-2-5 sequence)

Measure System	
Auto Measure (32 Types)	Vpp, Vmax, Vmin, Vamp, Vtop, Vbase, Cycle Mean, Mean,Cycle Rms, Vrms, Rise Overshoot, Fall Overshoot, Rise Preshoot, Fall Preshoot. Rise time, Fall time, Frequency, Period,+ Width,—Width, Positive Duty Cycle, Negative Duty Cycle, Burst Width, Phase, FRR, FRF, FFR, FFF, LRR, LRF, LFR, LFF
Cursor Measure	Voltage Differences between the Cursors (ΔV) Time/Frequency Differences between the Cursors (ΔT) Frequency/Time Differences between the Cursors ($1/\Delta T$)

Control Panel Function	
Auto Set	Auto adjusting the Vertical, Horizontal system and Trigger Position
Save/Recall	Support 2 Group referenced Waveforms,20 Group setups,20 Group captured Waveforms internal Storage/Recall function and USB flash driver storage function.

Hard Ware Frequency Counter	
Reading resolution	6 Bytes
Range	DC Couple , 10Hz to MAX Bandwidth
Signal Types	Satisfying all Trigger signals(Except Pulse width trigger and Video Trigger)

Generic Specification

Display System	
Display Mode	5.7in.(145mm)diagonal Liquid Crystal Display
Resolution	320 horizontal by 240 vertical pixels
Display Contrast	Adjustable
Backlight Intensity (Typical state)	60 can/Square meter
Wave display range	8 x 10 div
Wave Display Mode	Point, Vector
persist	close、 1 sec、 2 sec、 5 sec、 infinity
waveform interpolation	Sin(x)/x、 Linear
Color model	Normal 、 Opposite
Language	Chinese, English

Environmental	
Temperature	Operating: 0°C to +55°C Nonoperating: -40°C to +70°C
Humidity	Operating: 95%RH, 40°C, 24 hours Nonoperating: 90%RH, 65°C, 24 hours
Height	Operating: 4,580m Nonoperating: 15,266m
pollution	It Usually only have dry insulative pollution It must be prospective that it is instant electric because of icing once in a way.

Power Supply	
Input Voltage	100-240 VAC, CAT II, Auto selection
Frequency Scope	47Hz to 440Hz
Power	50VA Max

Mechanical		
Dimension	length	300mm
	Width	290mm
	Height	150mm
Weight	4.6kg	

Appendix B: The table of types of ADS 7000 series oscilloscopes

Model	Bandwidth (MHz)	Sampling Rate (RT/Equivalent)	Display
ADS2202CA	200	1GSa/s (ETS: 50GSa/s)	Color 5.7" LCD (320 x 240)
ADS2152CA	150	1GSa/s (ETS: 50GSa/s)	Color 5.7" LCD (320 x 240)
ADS2102CA	100	1GSa/s (ETS: 50GSa/s)	Color 5.7" LCD (320 x 240)
ADS2062CA	60	1GSa/s (ETS: 50GSa/s)	Color 5.7" LCD (320 x 240)
ADS2042CA	40	1GSa/s (ETS: 50GSa/s)	Color 5.7" LCD (320 x 240)
ADS2022CA	25	1GSa/s (ETS: 50GSa/s)	Color 5.7" LCD (320 x 240)
ADS2202SA	200	1GSa/s (ETS: 50GSa/s)	Monochrome 5.7" LCD (320 x 240)
ADS2152SA	150	1GSa/s (ETS: 50GSa/s)	Monochrome 5.7" LCD (320 x 240)
ADS2102SA	100	1GSa/s (ETS: 50GSa/s)	Monochrome 5.7" LCD (320 x 240)
ADS2062SA	60	1GSa/s (ETS: 50GSa/s)	Monochrome 5.7" LCD (320 x 240)
ADS2042SA	40	1GSa/s (ETS: 50GSa/s)	Monochrome 5.7" LCD (320 x 240)
ADS2022SA	25	1GSa/s (ETS: 50GSa/s)	Monochrome 5.7" LCD (320 x 240)
ADS2202C	200	500MSa/s(ETS:50GSa/s)	Color 5.7" LCD (320 x 240)
ADS2152C	150	500MSa/s(ETS:50GSa/s)	Color 5.7" LCD (320 x 240)
ADS2102C	100	500MSa/s(ETS:50GSa/s)	Color 5.7" LCD (320 x 240)

ADS2062C	60	500MSa/s(ETS:50GSa/s)	Color 5.7" LCD (320 x 240)
ADS2042C	40	500MSa/s(ETS:50GSa/s)	Color 5.7" LCD (320 x 240)
ADS2022C	25	500MSa/s(ETS:50GSa/s)	Color 5.7" LCD (320 x 240)
ADS2202S	200	500MSa/s(ETS:50GSa/s)	Monochrome 5.7" LCD (320 x 240)
ADS2152S	150	500MSa/s(ETS:50GSa/s)	Monochrome 5.7" LCD (320 x 240)
ADS2102S	100	500MSa/s(ETS:50GSa/s)	Monochrome 5.7" LCD (320 x 240)
ADS2062S	60	500MSa/s(ETS:50GSa/s)	Monochrome 5.7" LCD (320 x 240)
ADS2042S	40	500MSa/s(ETS:50GSa/s)	Monochrome 5.7" LCD (320 x 240)
ADS2022S	25	500MSa/s(ETS:50GSa/s)	Monochrome 5.7" LCD (320 x 240)

Appendix C: ADS2000 Series Oscilloscope Accessories

Standard Accessories :


- 1:1/10:1 probe (2 PCS)
- One cable
- USB Host/Device
- EasyScope computer software system
- User Manual

Options:

- GPIB Communication Module
- Serial interface communication Module
- Pass/Fail interface module

Appendix D: Default setup

Menu or system	options , knobs or buttons	Default setup
CH1 CH2	Coupling	DC
	Bw limit	Off
	Volts/div	Coarse
	Probe	10X
	Invert	Off
	Volts/div	1.00V
MATH	Operation	CH1-CH2
	CH1 invert	Off
	CH2 invert	Off
	FFT operation: Source Window FFT Zoom Scale	CH1 Hanning 1X dBVrms
HORIZONTAL	Window	Main
	Position	0.00 μ s
	Sec/div	500 μ s
	Window Zone	50.0 μ s
	Trigger knob	level
CURSOR	Type	Off
	Source	CH1
	Horizontal (voltage)	+/-3.2divs
	Vertical (time)	+/-4divs

MEASURE	Source	CH1
	Type	average
ACQUIRE	three mode options)	Sampling
	Averages	16
DISPLAY	Type	Vectors
	Persist	off
	Gird	
REF	Type	waveform
	Source	CH1
	REFA	off
TRIGGER (edge)	Type	edge
	Source	CH1
	Slope	Rising
	Mode	Auto
	Coupling	DC
	LEVEL	0.00V
TRIGGER (pulse)	Type	pulse
	Source	CH1
	When	=
	Set Pulse Width	1.00ms
	Mode	Auto
	Coupling	DC
TRIGGER (Video)	Type	Video
	Source	CH1
	Polarity	Normal
	Sync	All Lines
	Standard	NTSC

Appendix E: Daily Maintain and Cleaning

Daily Maintain

DO not store or leave the instrument in where the LCD display will be exposed to direct sunlight for long periods of time.

CAUTION: To avoid damage to the instrument or probes, do not expose them to sprays, liquids, or solvents

Cleaning

If this instrument requires cleaning, disconnect it from all power sources and clean it with a mild detergent and water. Make sure the instrument is completely dry before reconnecting it to a power source.

To clean the exterior surface, perform the following steps:

- 1). Remove loose dust on the outside of the instrument and probes with a lint-free cloth. Use care to avoid scratching the clear plastic display filter.
- 2). Use a soft cloth dampened with water to clean the instrument. Use an aqueous solution of 75% isopropyl alcohol for more efficient cleaning.

Note:

To avoid damage to the surface of the instrument or probes, do not use any abrasive or chemical cleaning agents.

Index

- Width	102	HORI MENU.....	73
+ Width	102	Horizontal System	73
AC Line.....	79	Invert	57
Accessories	109	Language	86
Acquiring Signals system.....	86	LEVEL	77
Aliasing.....	89	MEASURE.....	98
Application of X-Y function	94	Model.....	79
Auto	79	Normal.....	79
AUTO	78	Peak Detect.....	87
auto setup	78	Persist	90
Average	87	Polarity	83
Base time.....	89	Position.....	85
Coarse	56	Probe.....	7, 56
Connector.....	88	Probe Attenuation Setting.....	9
Contract us	102	Probe Compensation.....	8
Coupling.....	56, 84	Probe component.....	88
Cursor Measurement.....	95	Probe Safety.....	7
Cursor Moving.....	96	Real Time Sampling	88
Cymometer.....	86	Ref.....	71
default setup	54	Rise.....	101
DEFAULT SETUP	86	RUN/STOP.....	86, 88
Display sweep mode	75	Sampling.....	87
DO self cal	87	SAVE/RECALL	105
Do Self Test.....	87	SAVE/RECALL WAVEFORM	109, 113
Equivalent Time Sampling:	88	Scale Measurement.....	95
EXT.....	78	Screen.....	91
EXT TRIG.....	88	Self Calibration.....	10
EXT/5.....	78	Self Test.....	93
Fall	101	SET TO 50%	77
FFT.....	66	Signal Source.....	78
Fine Resolution	57	Single.....	79
FORCE.....	77	SINGLE.....	86, 88
Grid	91	Sound.....	86

Storage System.....	105	Vmin.....	101
Sync	83	Volt/div	65
Time Cursor	96	Voltage Cursor	96
TRIG MENU	77	Vpp	101
Troubleshooting.....	100	Wave Cancel.....	57
Universal knob.....	55	Window	74
UTILITY.....	86	Window Zone	75
Utility System	86	X-Y Format	93
Vertical System	56	YT.....	91
Vmax.....	101		